# ACCESSORY AND COMPONENT CATALOG

CONTENTS	PAGE
Access Controls	1-2
Radio Controls	3
Vehicle Detection Systems	4-5
Safety Accessories	6-7
Miscellaneous	8
Replacement Components	9-10



#### NEMA 1 - Surface Mount

Interior steel enclosure, pushbutton control stations with momentary contacts.



- **STATION020** Three button (N. C. stop), open, close and stop control for operators wired in B2 and C2 wiring.
- **STATION010** Two button, for open and close. Should only be used with operators wired for constant pressure to open, and close (D1 wiring).
- **STATION001** One button, for open only or open/close control with B2 wiring.

#### NEMA 1 - Flush Mount

Interior flush mount control station for single gang box with momentary contacts.



- STATION076 Three button (N. C. stop), open, close, and stop, control for operators wired in B2 and C2 wiring. Comes with steel face plate: 4 1/4" x 2 1/4" back box: 4" x 2".
- STATION041 Three button (N. C. stop), open, close, and stop control for operators wired in B2 and C2 wiring. Comes with aluminium face plate: 5 1/2" x 3 1/2", back box with bracket: 4" x 2".

#### NEMA 4/12 - Surface Mount - Non metallic

Exterior surface mount, non-metallic enclosure control stations with double momentary contacts (N. O. and N. C.).



- STATION031 Three button, open, close, and stop control for operators wired in B2 and C2 wiring.
- STATION035 Three button key lock-out, open, close, and stop control for operators wired in B2 and C2 wiring. When the key switch is on off position, the pushbuttons are inoperative.
- **STATION027** Identical to STATION035 but with a 24V pilot light.

- **STATION013** Two button, for open and close. Should only be used with operators wired for constant pressure to open and close (D1 wiring).
- **STATION003** One button, for open only or open/close control with B2 wiring.

#### NEMA 4/12 - Surface Mount - Cast Metal

Exterior heavy duty, surface mount, cast metal control stations with momentary contacts.



- STATION056 Three button (N.C. stop), open, close, and stop control for operators wired in B2 and C2 wiring.
- **STATION057** Three button key lock-out (N. C. stop), open, close, and stop control for operators wired in B2 and C2 wiring. When the key switch is on off position, the pushbuttons are inoperative.

#### NEMA 7/9 - Surface Mount

Explosion proof, die cast enclosure control station.



• **STATION049** Three button (N. C. stop), open, close, and stop control for operators wired in B2 and C2 wiring.



## **Access Controls**

#### Key Switches - Interior - Flush Mount

Interior, flush mount, tamper proof enclosure.



• KEYSWITCH010 Single key open-close, center return. Should only be used with operators wired for constant pressure to open and close (D1 wiring). Supplied with 2 keys, key removable only in center position.

#### Key Switches - Exterior - Surface Mount

Exterior, wall or post mount, cast aluminium enclosure.



- **KEYSWITCH034** Single key, center return with one momentary contact, for open only or open/close control with B2 wiring.
- **KEYSWITCH006** Madison cylinder alone for KEYSWITCH034.

#### Key Switches - Exterior - Surface Mount


Exterior, surface mount, tamper proof, cast iron enclosure.



- KEYSWITCH015 Single key open-close, center return. Should only be used with operators wired for constant pressure to open and close (D1 wiring). Supplied with 2 keys. Key removable only in center position.
- **KEYSWITCH017** Single key, on/off. To turn on or off auxiliary equipment. Supplied with 2 keys. Key removable in all positions.
- KEYSWITCH019 Single key open-close, center return with stop button (N.C. contact). Open, close, and stop control for operators wired in B2 and C2 wiring. Supplied with 2 keys. Key removable only in center position.

## Ceiling Pull Switches


Pull switches may be used as an open only or open/close control with B2 wiring.

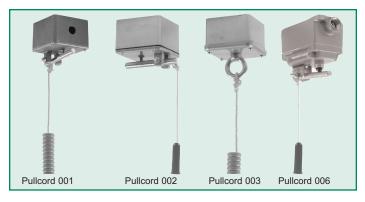

- PULLCORD001 Exterior cast iron enclosure pull switch with SPST contact.
- PULLCORD002 Exterior cast iron enclosure pull switch with DPST contact. An additional contact is available to control auxiliary equipment.
- PULLCORD003 Exterior, swivel type cast iron enclosure pull switch with SPST contact.
- PULLCORD006 Explosion proof pull switch with DPST contact. An additional contact is available to control auxiliary equipment.

Note: SPST= single pole single throw DPST= double pole single throw

#### Card Reader and Digital Key Pad

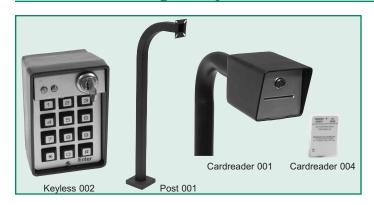


- **KEYLESS002** Exterior digital keypad in a cast aluminium enclosure. Up to 1000 reprogrammable 2 to 6 digits codes. Programmable relay activation time available. Power supply: 12 24V AC / DC.
- **POST001** Heavy gauge steel gooseneck post, 39" high for pad mount. Wiring can be fed through the post.
- CARDREADER001 Exterior 4 period card reader in a sturdy weather steel housing. Comes with a 36" high post.
- CARDREADER004 Additional card, minimum order 20. (when re-ordering please give code and card number).
- CARDREADER003 Replacement coded cartridge.



#### Manaras 313 MHZ Open/Close Radio Controls

A range of 313MHz radio receivers and transmitters for open/close control type with B2 wiring. 1024 possible code combinations available with an 10-digit binary dipswitch.

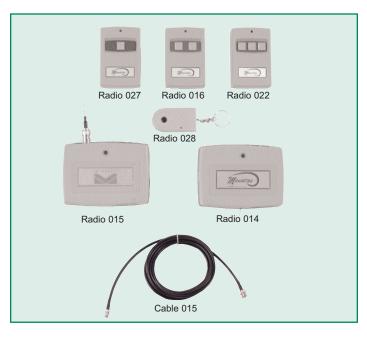


- RADIO027 MT-1000: single button transmitter for operation of one door. Comes with L.E.D. battery life indicator, 9v battery and sunvisor clip.
- RADIO016 MT2-1000: two button transmitter for operation of two doors. Comes with L.E.D. battery life indicator, 9v battery and sunvisor clip.
- RADIO022 M T 3 1 0 0 0 : three button transmitter for operation of three doors. Comes with L.E.D. battery life indicator, 9v battery and sunvisor clip.

- RADIO028 MTM-1000: one button miniature transmitter for operation of one door. Compact size and key chain holder. Comes with L.E.D. battery life indicator and a mini 12v battery.
- RADIO014 MR-1000: receiver to control one operator with MT series transmitters. Operates on 24VAC. A L.E.D. indicates that the unit has been activated. Can be installed directly onto our operators control box.
- RADIO015 MRX-1000: identical to RADIO014 but with commercial receiver antenna for increased range.
- CABLE015 Extension 15' coaxial cable for antenna for all Manaras receivers.

### Manaras 313 MHZ Commercial/Industrial Open/Close/Stop Radio Controls

A range of 313MHz radio receivers and transmitters for open close and stop control for operators wired in B2 wiring. 1024 possible codes combinations available with an 8-digit binary dipswitch.

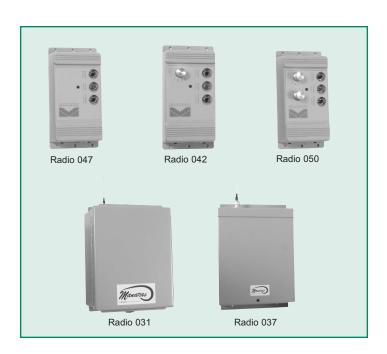

- RADIO047 MCT-1: wireless remote 3-button station for one door. Can execute, open, close, stop commands in any sequence required. Comes with L.E.D. battery life indicator, and 9v battery. Can be wall or post mounted. Must be used with MCR series receiver.
- RADIO042 MCT-4: wireless remote 3-button station for up to 4 doors. Can execute open, close, stop commands in any sequence required. By selecting A, B, C, D on the rotary switch, you can operate any of the four doors. Comes with L.E.D. battery life indicator, and 9v battery. Can be wall or post mounted. Must be used with 4 MCR series receiver.
- RADIO050 MCT-32: wireless remote 3-button station for up to 32 doors. Can execute open, close, stop commands in any sequence required. By selecting A, B, C, D on one rotary switch, and 1 to 8 on the other, you can operate any of the 32 doors. Comes with L.E.D. battery life indicator, and 9v battery. Can be wall or post mounted. Must be used with 32 MCR series receiver.
- RADIO037 MCR-32: receiver in a steel Nema 1 enclosure, to control one operator with MCT series transmitters. It operates on 24VAC. Comes with an antenna
- RADIO031 MCR-32 N4: identical to RADIO037 but in a steel Nema 4/12 enclosure.



# Vehicle Detection Systems


#### **Vehicle Loop Detectors**

They are used for detecting the presence or the passage of a vehicle over an inductive wire loop embedded in the road way surface. It can be used as an open only control or as a reverse and hold open control for an operator with B2, C2, or timer to close wiring.



- LOOP008 SARASOTA 625X 24VAC inductive loop detector. Failsafe outputs. Automatic tuning. One presence relay and a second relay which can be configured as presence, pulse on entry or pulse on exit. Operates on 24VAC. Comes with harness.
- LOOP035 Inductive loop detector. Failsafe outputs. One presence relay and a second relay which can be configured as presence, pulse on entry or pulse on exit. Operates on 24VAC. Comes with harness.
- LOOP007 SARASOTA 625X 110VAC inductive loop detector. Failsafe outputs. Automatic tuning. One presence relay and a second relay which can be configured as presence, pulse on entry or pulse on exit. Operates on 110VAC. Comes with harness.
- **RELAY021** 11 pin socket base for loop detectors.

#### **Preformed Inductive Loops**

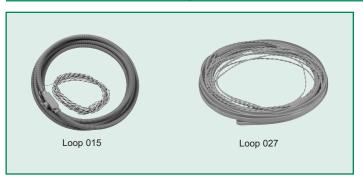

• LOOP015 Pre-formed loop, pave-over style, with 30' of wire lead, 8' x 4' size (other sizes available).

• LOOP027 Pre-formed loop, sawcut style, with 30' of wire lead, 8' x 4' size (other sizes available).

## Treadles

When a vehicle passes over the treadle it activates a contact, which gives an open or reversing command to an operator with B2, C2, or timer to close wiring. No power needed.



• TREADLE001 Electric treadle, surface mount, 5' long.



Detects motion of vehicles or pedestrians in a wide area in front of the door. It is used as an open control for an operator with B2, C2, or timer to close wiring.



• MOTION003 Nema 4 motion detector that can be configured as a unidirectional or bidirectional sensor. Maximum range 20'.

Operates on 24V AC / DC.



• TREADLE002 Exterior pneumatic treadle. Includes a 10' hose, hose plug and exterior airswitch




# Vehicle Detection Systems

#### Photoelectric Cells

Photoelectric cells can be used as an opening or a safety reversing device when an infrared light is broken.



• PHOTO008 Monitored through beam photocell. Maximum range 30'. Nema 1 enclosure. Operates on 24V AC / DC. Kit includes commercial operator interface module, photocells, and steel brackets.

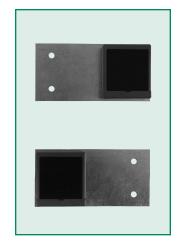

• PHOTO044A EMX through beam photocell. Maximum range 100'. Operates on 12 or 24V AC / DC. Kit includes steel brackets.



• PHOTO018 OMRON E3K retro-reflective photocell. Maximum range 33'. Nema 4, 4X, and 12 enclosure. Operates on 24 to 240V AC / DC. Kit includes steel brackets.



- **PHOTO032** AB GRU 115V retro-reflective photocell. Maximum range 30'. Nema 4, 4X, 6P, 12, 13 enclosure. Operates on 115 to 240V AC / DC. Kit includes 3" reflector.
- **PHOTO038** AB GRU 24V identical to PHOTO032 but operates on 24VAC.

#### Warning Lights

Manaras operators can be modified in order to control warning lights. Please consult the modification section of our price list to find out about the different options available.




- TRAFFIC028 Red only traffic light. Operates on 115V. Includes visor, bulb and mounting brackets.
- TRAFFIC029 Red & green traffic lights. Operates on 115V. Includes visors, bulbs, and mounting brackets.





#### Pneumatic Reversing Edge Kits

A pneumatic reversing edge is an entrapment protection system, which will trigger an air switch to reverse or stop the door when it encounters an obstruction. Not recommended for doors over 22 feet wide.

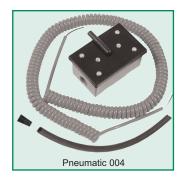



- PNEUMATIC004 P n e u-matic kit for doors up to 14' high. Includes an exterior, SPDT, adjustable air switch with metal case, a 2-wire 14' coil cord (COIL005), a connection hose and a hose plug. HOSE001 has to be ordered separately according to door width.
- PNEUMATIC005 P n e u matic kit for doors up to 20' high. Includes an exterior, SPDT, air switch with metal case, a 2-wire 20' take-up reel (REELITE005), a connection hose and a hose plug. HOSE001 has to be ordered separately according to door width.






- PNEUMATIC007 P n e u-matic kit for doors up to 14' high. Includes an exterior, SPDT, air switch with plastic housing, a 2-wire 14' coil cord (COIL005), a connection hose and a hose plug. HOSE001 has to be ordered separately according to door width.
- PNEUMATIC008 P n e u matic kit for doors up to 20' high. Includes an exterior, SPDT, air switch with plastic housing, a 2-wire 20' take-up reel (REELITE005), a connection hose and a hose plug. HOSE001 has to be ordered separately according to door width.





- PNEUMATIC006 Explosion proof pneumatic kit for doors up to 20' high. Includes an explosion proof air switch, a 20' air coil with fittings, a connection hose and a hose plug. HOSE001 has to be ordered separately according to door width.
- **HOSE001** Soft rubber hose, fi" ID. Has to be ordered with pneumatic kits in a length corresponding to door width.

## Pneumatic Edges Individual Components

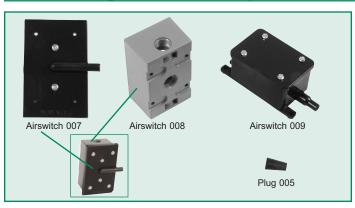

- AIRSWITCH007 Exterior, SPDT, adjustable air switch. To be used with metal case AIRSWITCH008.
- AIRSWITCH008 Metal case for AIRSWITCH007.
- AIRSWITCH009 Exterior, SPDT MOSLEY air switch with plastic housing.
- PLUG005 Plug for HOSE001.



#### Warning:

Motorized doors can cause serious injuries or death. Manaras strongly recommends the use of entrapment protection sytems, especially in case of momentary contact to close as in B2 wiring or timer to close.


## Safety Accessories

#### Electrical Reversing edges

An electro-mechanical reversing edge is an entrapment protection system, which causes the door to reverse or to stop when the door encounters an obstruction. 4-wire electric edges are used in failsafe safety edge circuits.

#### **Note**

Minimum length 4'. Please note that these products are custom made, no refunds can therefore be accepted. Length to order equal daylight opening minus 2". Universal or end mount is standard.

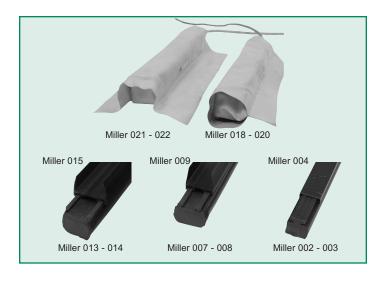


- MILLER021 MU-22, 2 wire type for sectional and sliding doors, universal mount.
- MILLER022 MU-22, 4 wire type for failsafe circuits, universal mount.
- MILLER018 MT-22, 2 wire type for rolling doors with double angle bottom bar, universal mount.
- MILLER020 MT-22, 4 wire type for failsafe circuits, universal mount.
- MILLER013 ME-123, 2 wire type for sectional doors, universal mount.
- MILLER014 ME-123, 4 wire type for failsafe circuits, universal mount.
- MILLER015 ME-123C, C mounting channel for ME-123 edges.

- MILLER007 ME-113, 2 wire type for sectional doors, end mount.
- MILLER008 ME-113, 4 wire type for failsafe circuits, end mount.
- MILLER009 ME-113C, C mounting channel for ME113 edges.
- MILLER002 ME-110, 2 wire type for counter shutters & rolling grilles, end mount.
- MILLER003 ME-110, 4 wire type for failsafe circuits, end mount.
- MILLER004 ME-110C, C mounting channel for ME-110 edges.

#### Safety Edge Connection Accessories

Retractable connection to link the sensing edge and the operator.

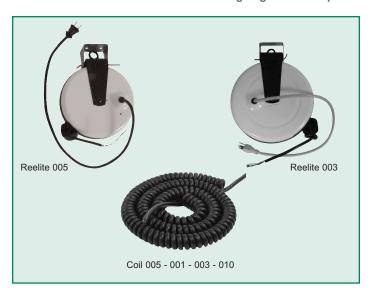

- **REELITE005** Metallic Takeup reel, 2 wire, 18 gauge, 20' extension.
- **REELITE003** Metallic Takeup reel, 3 wire, 18 gauge, 30' extension.
- COIL005 Coil cord, 2 wire, 18 gauge, 14' extension.
- COIL001 Coil cord, 2 wire, 18 gauge, 20' extension.
- COIL003 Coil cord, 4 wire, 18 gauge, 20' extension.
- COIL010 Coil cord, 4 wire, 18 gauge, 30' extension.

Manazas



#### **Warning:**

Motorized doors can cause serious injuries or death. Manaras strongly recommends the use of entrapment protection systems, especially in case of momentary contact to close as in B2 wiring or timer to close.

## Miscellaneous

#### Emergency Egress Control

For quick disconnect of Opera J or Opera HJ operators in case of emergency egress.



• EMERGENCY001 Emergency egress control. Handle flush with face plate. Comes with 15' cable and S-hook.

#### Interlock Switches

Prevents the control of the operator when the door is locked. The switch is a normally close contact which is connected to the operator interlock terminal.



• INTERLOCK004 Door interlock switch for rolling grilles.

 INTERLOCK005 Door interlock switch for sectional doors.

#### **Brackets**



• BRACKET111 Hood mounting angle bracket. Cast iron. Applies to: MJ, MJH, GH and Opera models.



• BRACKET112 Wall mounting bracket. Steel plate with stud. Allows for tensioning of chain. Specially recommended on GH model when the fixing surface is rough. Applies to: MJ, MJH, GH and Opera models.


#### Splash Proof Covers




- SPLASH001 Splash cover applies to: MGH & GH up to 2 HP.
- SPLASH003 Splash cover applies to: MSJ, Opera models.
- SPLASH004 Splash proof cover applies to: MGT.
- SPLASH005 Splash proof cover applies to: MTH, MTBH.

#### Chain Spreaders

Allows for proper alignment of the operator and door sprockets, and also provides proper tension on the drive chain.

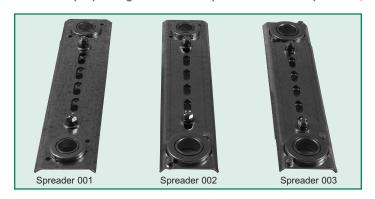

- SPREADER001 Chain spreader for installations with 1" operator shaft and 1" door shaft.
- SPREADER003 Chain
- SPREADER002 Chain spreader for installations with 1" operator shaft and 1-1/4" door shaft.

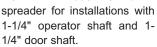



# Replacement Components

#### **Electric Motors**

Instant reverse, intermittent duty, ODP, 1 phase, 60hz motors with internal thermal overload for medium duty operators.



- MOTOR189 1/2HP 110V, 1050 rpm.
   Applies to MLJ, MLH, MLT.
- MOTOR260 1/2HP 110V / 1500 rpm, for Opera-MJ/MH.
- CAPACITOR024 70µF, 240 VAC, 50/60hz capacitor. Applies to all intermitent-duty motors.

Continuous Duty, Base Mount, ODP 60hz motors, 1750 rpm. They apply to Opera-J, Opera-H, MSJ, MTH, MTBH, MSLD operators.



- MOTOR253 1/3HP 115/230V 1 Phase
   MOTOR254 1/2HP 115/230V 1 Phase
- MOTOR255 3/4HP 115/230V 1 Phase
   MOTOR256 1HP 115/230V 1 Phase
- MOTOR271 1/2HP 230/460V 3 Phase
   MOTOR273 3/4HP 230/460V 3 Phase
- MOTOR275 1HP 230/460V 3 Phase
- MOTOR272 1/2HP 575V 3 Phase
   MOTOR274 3/4HP 575V 3 Phase
- MOTOR276 1HP 575V 3 Phase

Continuous duty motor spare parts.

- RESISTOR004 Capacitor resistor for 1/2 and 3/4 HP motors.
- CAPACITOR015 340-408 μF capacitor for 1/2 HP 115 and 230V 1 Phase operators.
- CAPACITOR008  $\,$  540-648  $\mu F$  capacitor for 3/4 HP 115 and 230V 1 Phase operators.

#### **Class II 24VAC Transformers**



- TRANSF001 120/24V, 30VA
- TRANSF005 120/24V, 40VA
- TRANSF037 240/208/24V, 40VA
- TRANSF088 480/24V, 40VA
- TRANSF142 575/24V, 40VA
- TRANSF006 120/24V, 50VA
- TRANSF003 120/24V, 100VA
- TRANSF017 208/24V, 100VA
- TRANSF050 220/24V, 100VA
- TRANSF087 480/24V, 100VA
- TRANSF107 575/24V, 100VA

Continuous Duty, Base Mount, TEFC, 60hz motors, 1750 rpm. They apply to MSJ, MTH, MTBH, MJ, MJH, MSLD operators. They are used in Nema 4/12 installations.



MOTOR257 1/2HP 115/230V 1 Phase
 MOTOR258 3/4HP 115/230V 1 Phase
 MOTOR259 1HP 115/230V 1 Phase
 MOTOR277 1/2HP 230/460V 3 Phase
 MOTOR279 3/4HP 230/460V 3 Phase
 MOTOR281 1HP 230/460V 3 Phase
 MOTOR278 1/2HP 575V 3 Phase
 MOTOR280 3/4HP 575V 3 Phase

575V

Phase

Continuous Duty C-Flange TEFC, 60hz motors, 1750 rpm. They apply to Gear Head operators: GH, MGH, MGT, MGSLD.

• **MOTOR282** 1HP



- MOTOR316 1/2HP 115/230V 1 Phase
  MOTOR317 3/4HP 115/230V 1 Phase
  MOTOR318 1HP 115/230V 1 Phase
  MOTOR319 1.5HP 115/230V 1 Phase
  MOTOR261 1/2HP 230/460V 3 Phase
  MOTOR262 3/4HP 230/460V 3 Phase
  MOTOR264 1HP 230/460V 3 Phase
- MOTOR266 1.5HP 230/460V 3 Phase
   MOTOR268 2HP 230/460V 3 Phase
   MOTOR263 3/4HP 575V 3 Phase
- MOTOR265 1HP 575V 3 Phase
   MOTOR267 1.5HP 575V 3 Phase
- MOTOR270 2HP 575V 3 Phase

#### **Limit Switches**

Single limit switches, SPDT, used to stop the door at top and bottom or as disconnect switch.



- LIMIT001 Single limit switch with lever. Applies to old Heavy-duty operator models. It is also used as disconnect switch for GH and MGH models.
- LIMIT015 Single limit switch without lever. Applies to all current operators. It is also used as disconnect switch for Opera models.
- LIMIT006 Single limit switch with lever.
   Applies to old Medium-duty operator models.
- LIMIT016 Single limit switch used as disconnect switch on MLH

Double limit switches, DPDT. The extra contact is used to control auxiliary equipments.



- **LIMIT003** Double limit switch with lever. Applies to old operator models.
- **LIMIT018** Double limit switch without lever. Applies to all current operators.





# Replacement Components

Relays, Contactors Solenoids, Overloads, Timers Auxiliary Contacts, Cycle Counters

#### **Reversing Relays**



- **RELAY024** 24V Relay, DP DT, used in all heavy-duty operators as well as MLT and Opera-MH/MJ.
- **RELAY026** 120V Relay, DP DT, used in all 115V heavy-duty operators.
- **RELAY027** 240V Relay, DP DT, used in all 240V heavy-duty operators.
- **RELAY039** 24V Relay, 3 pole, used in MLT and Opera-MH/MJ.
- **RELAY043** 24V Relay, 4 pole, used in MLH, MLJ operators.

#### **Reversing Contactors**

Reversing contactors are used on all Manaras heavy-duty operators.



- CONTACTOR041 Linear contactor for 1 phase operators.
- CONTACTOR042 Linear contactor for 3 phase operators
- **CONTACTOR003** MMTC reversing contactors.
- •CONTACTOR043 Allen Bradley reversing contactor.

#### Solenoids

Used on all operators with solenoid brake.



- **SOLENOID001** 120V solenoid switch, for 120V operators.
- **SOLENOID002** 240V solenoid switch, for 230V operators.
- **SOLENOID003** 440V solenoid switch, for 460V operators.
- **SOLENOID004** 575V solenoid switch, for 575V operators.

#### 1 Phase Overloads




- RESET001 Reset 4 A
- RESET002 Reset 5 A
- RESET005 Reset 8 A
- RESET007 Reset 10 A
- RESET012 Reset 15 A
- RESET013 Reset 16 A
- RESET014 Reset 17 A

#### Miscellaneous



FUSE006 2 A fuse.


#### 3 Phase Overloads

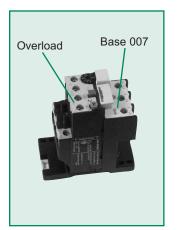

- **OVERLOAD034** 3 Phase 0.6 to 1 A
- **OVERLOAD035** 3 Phase 1 to 1.6 A
- **OVERLOAD036** 3 Phase 1.6 to 2.4 A
- **OVERLOAD037** 3 phase 2.4 to 4 A
- OVERLOAD038 3 phase 4 to 6 A
- OVERLOAD039 3 phase 6 to 10 A
- **OVERLOAD040** 3 phase 10 to 16 A
- BASE007 Overload base.

Note: new 3 phase operators have motors with integrated overloads. They don't require external overloads.

#### **Timers**

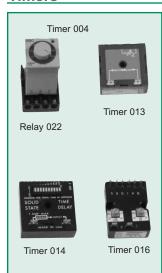

- TIMER004 Single timer, with SPDT contact, adjustable from 0 to 60s operates on 24V. Used in the timer to close option.
- **RELAY022** 8 Pin socket base for TIMER004.
- TIMER013 In line 1.5s time delay. Operates on 24V. Used in delay on reverse option.
- TIMER014 In line timer, adjustable from 1 to 1023s. Operates on 24V.
- TIMER016 Dual timer, 2 independent SPDT contact, adjustable from 0 to 230s, operates on 24V. Used in warning light option.

#### **Auxiliary Contacts**

Additional contact blocks with one normally open and one normally closed contact. For the control of auxiliary features.



- AUXCON039 Auxiliary contact: Applies to GH, MGH, MGT, MGSLD.
- AUXCON042 Auxiliary contact: Applies to operators with linear contactors.

#### **Cycle Counter**

Non resettable cycle counter which operates on 24V.



• CYCLE006 Non resettable cycle counter, Inside mount.





## **Customer Service and Technical Support**

Tel: 1-800-361-2260 Fax: 1-888-626-0606

Web Site www.manaras.com