



Addenda – Applications Environnementales

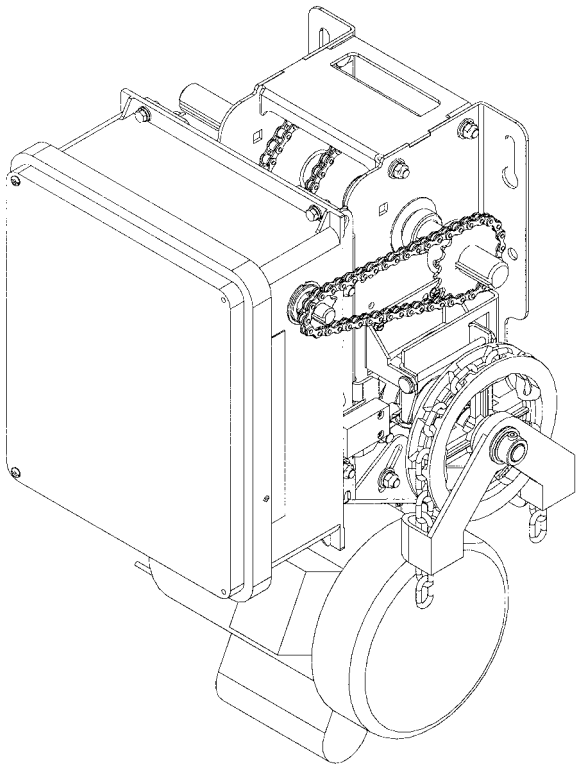

OPHW
(OPHC)

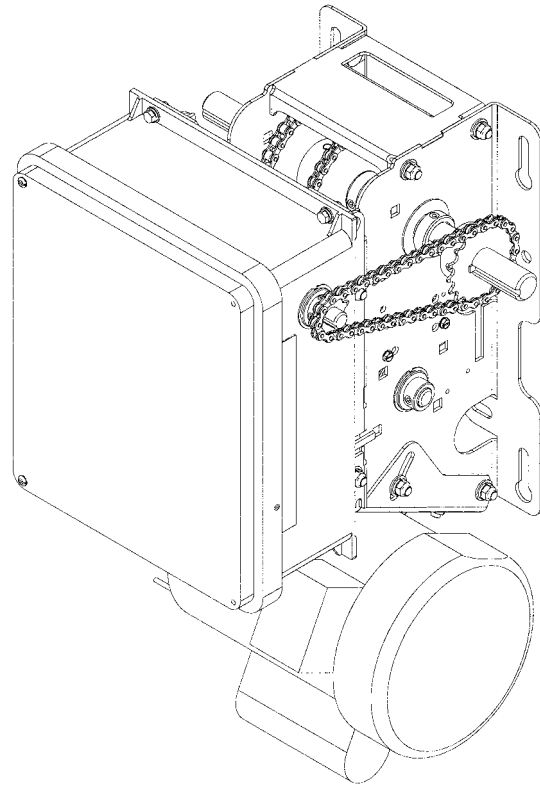

OPJW
(OPJC)

Note: Cet addenda doit être utilisé en conjonction avec le manuel d'Installation et d'Instruction fourni avec l'opérateur.

Des opérateurs conçus pour résister aux éclaboussures de liquide ou conçus pour les lave-autos, sont fabriqués avec des moteurs électriques TFV ou TFNV incluant une station à 3 boutons NEMA4/12 ou NEMA4X étanche à l'eau et à l'huile.


Pour des informations générales, référez-vous au manuel d'Installation et d'Instruction fourni avec l'opérateur



FICHE TECHNIQUE

GÉNÉRALITÉS

TENSION D'ALIMENTATION.....	115, 230 V c.a monophasée, 208, 460, 575V c.a triphasée
TENSION DE COMMANDE.....	24VAC transformateur de classe 2, fusible 2 A, de type ACG
MOTEUR.....	Service continu 1/2, 3/4, 1 CV
VITESSE DE SORTIE.....	41 RPM
POIDS.....	100 Lbs (45.5 Kg) pour OPHW - 1/2HP 115V -
CÂBLAGE STANDARD.....	C2- contact momentané pour l'ouverture et l'arrêt et pression constante pour la fermeture

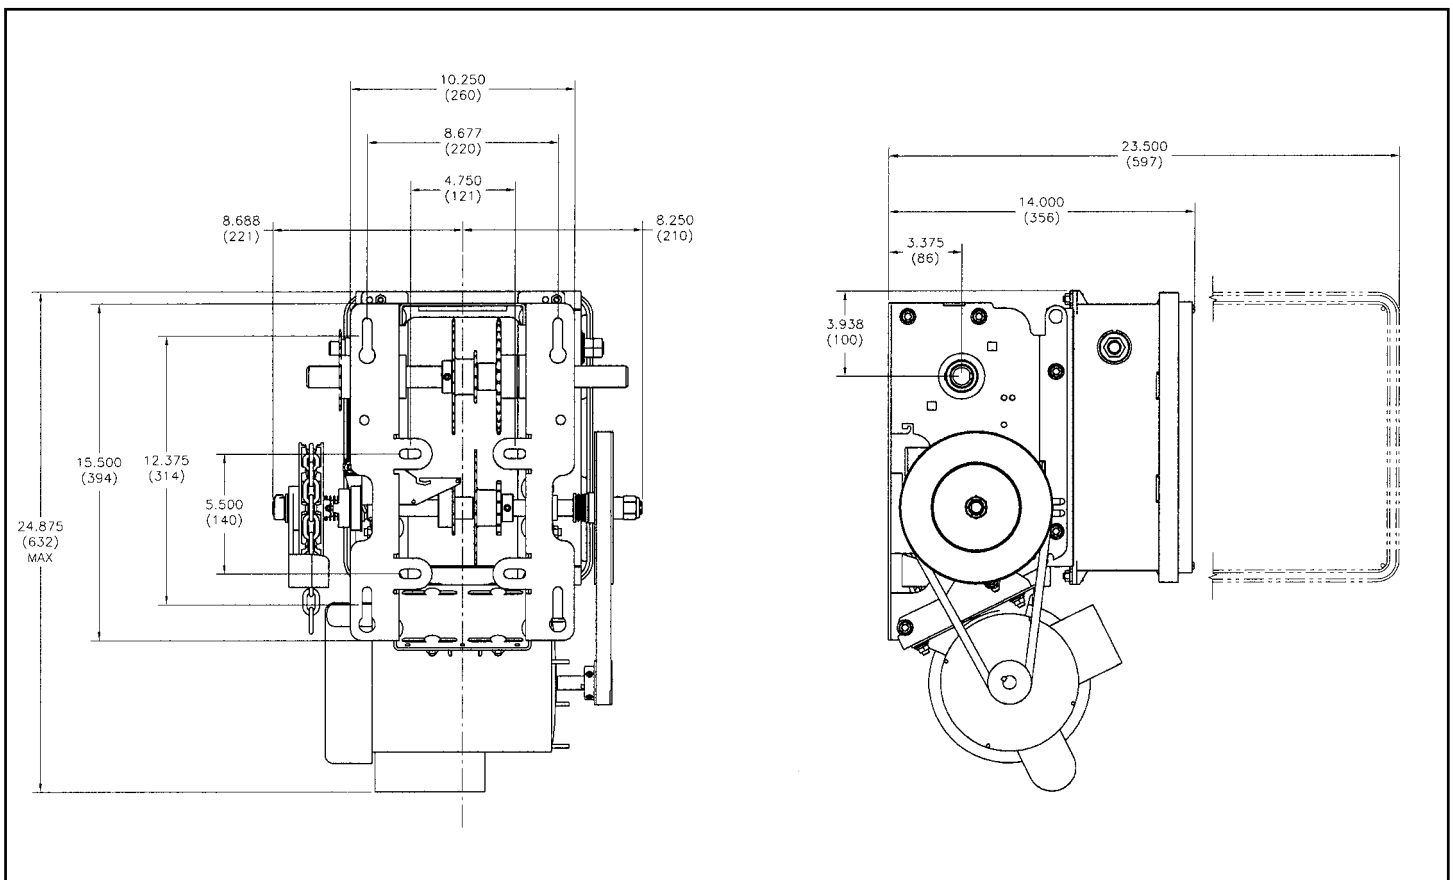DIMENSIONS
(OPHW)

MISE EN GARDE

AFIN DE RÉDUIRE LES RISQUES DE BLESSURES GRAVES OU DE MORT, LISEZ ET SUIVEZ TOUTES LES INSTRUCTIONS D'INSTALLATION FOURNIES AVEC L'OPÉRATEUR.

• CONDUITS (TUYAUX) ET ACCESSOIRES POUR LA BOÎTE DE CONTRÔLE

Comparer aux boîtes des contrôles NEMA1, les boîtes de contrôles NEMA4/12 ou NEMA4X ne sont pas fournies pré-perçées pour les branchements du câble d'alimentation ou pour tous autres accessoires. Tous les perçages des trous nécessaires pour les montages doivent être effectués par les clients.

• Conduits et accessoires:

Utilisez toujours des conduits et des accessoires flexibles, non-métalliques et étanches à l'eau et à l'huile pour ces applications. Servez-vous des outils ou des scies précises et appropriées pour réaliser les trous. En insérant le conduit dans les accessoires, assurez-vous le gland de presse-étoupe est correctement compressée ou l'enveloppe du conduit n'est pas coupée ou déchirée nulle part pour éviter des fuites.

NOTE: Pour la préparation des conduits, suivez les instructions du fabricant et utilisez des matériaux conformes aux normes NEMA



AVERTISSEMENT

L'OPÉRATEUR DOIT ÊTRE CORRECTEMENT BRANCHÉ À LA TERRE À L'AIDE DU CONNECTEUR DE MISE À LA TERRE SITUÉE À L'INTÉRIEUR DE LA BOÎTE DE CONTRÔLE DE L'OPÉRATEUR.

• RÉCEPTEUR RADIO


Dans des applications NEMA4/12 ou NEMA4X, le bornier de raccordement n'est pas disponible sur le côté de la boîte de contrôle. Dans le cas d'un circuit électromécanique, le récepteur radio doit être branché directement sur le bornier principal. Pour le Circuit de Contrôle Électronique, des borniers appropriés sont disponibles sur la plaquette électronique pour le branchement du récepteur radio.

Le Récepteur Radio doit être localisé dans un endroit isolé ou protégé pour éviter d'être endommagé causé par la filtration d'eau.

Référez-vous aux schémas ci-dessous pour les branchements du Récepteur radio

CIRCUIT DE CONTRÔLE ÉLECTRIQUE

Partie de CCE: en bas - Bornier (TB2)

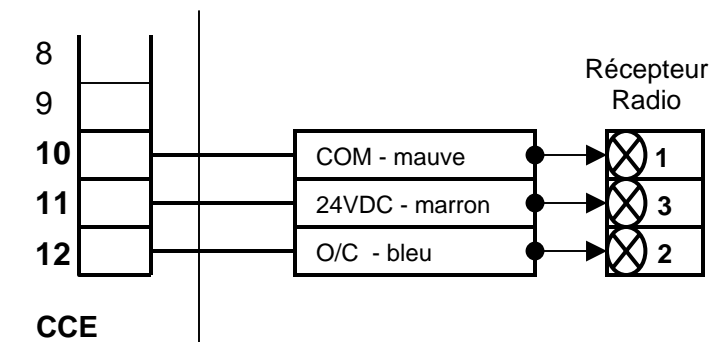

Instructions pour les branchements

Apartir de CCE	Sur Récepteur Radio
#COM	#1 (24 VOLTS)
#O/C	#2 (RELAY)
#24 V	#3 (COM OU GROUND)


CIRCUIT ÉLECTROMÉCANIQUE

Instruction pour les branchements

Apartir du bornier principal	Sur Récepteur Radio
# 7 (COM)	#1 (24 VOLTS)
#8 (O/C)	#2 (RELAY)
#9 (24 V)	#3 (COM OU GROUND)


NOTE IMPORTANTE:

Pour le modèle MCR-32, référez-vous à la fiche technique fournie avec le récepteur.

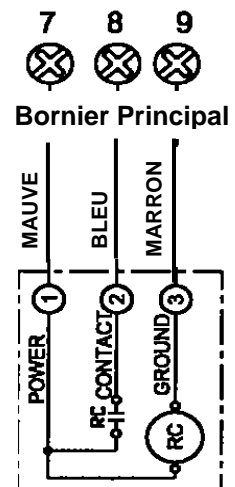

QTY	DESCRIPTION	#AMMANS	REV
1	OPERATOR HANDLE	171	A
10	8-20X2 LIQUID TIGHT TUBING	172	A
2	INSULATED SPACE TERMINAL 250	173	A
1	2 AMP FUSE AGC	174	A
1	MOTOR HARNESSE WITH 1 PHASE	175	A
1	LINK # 66 410-1	176	A
1	3 BUTTON STATION C4 DANFOSS	177	A
1	STICKER 2 AMP FUSE BAW	178	A
1	1/2" X 3/4" X 4"	179	A
1	STICKER 1/2" X 1/4" X 1/4"	180	A
1	STICKER 1/2" X 1/4" X 1/4"	181	A
1	BE/CZ HW STICKERS	182	A
2	WIRE NUT CHANGE 735	183	A

PARTS IDENTIFICATION NOT SHOWN

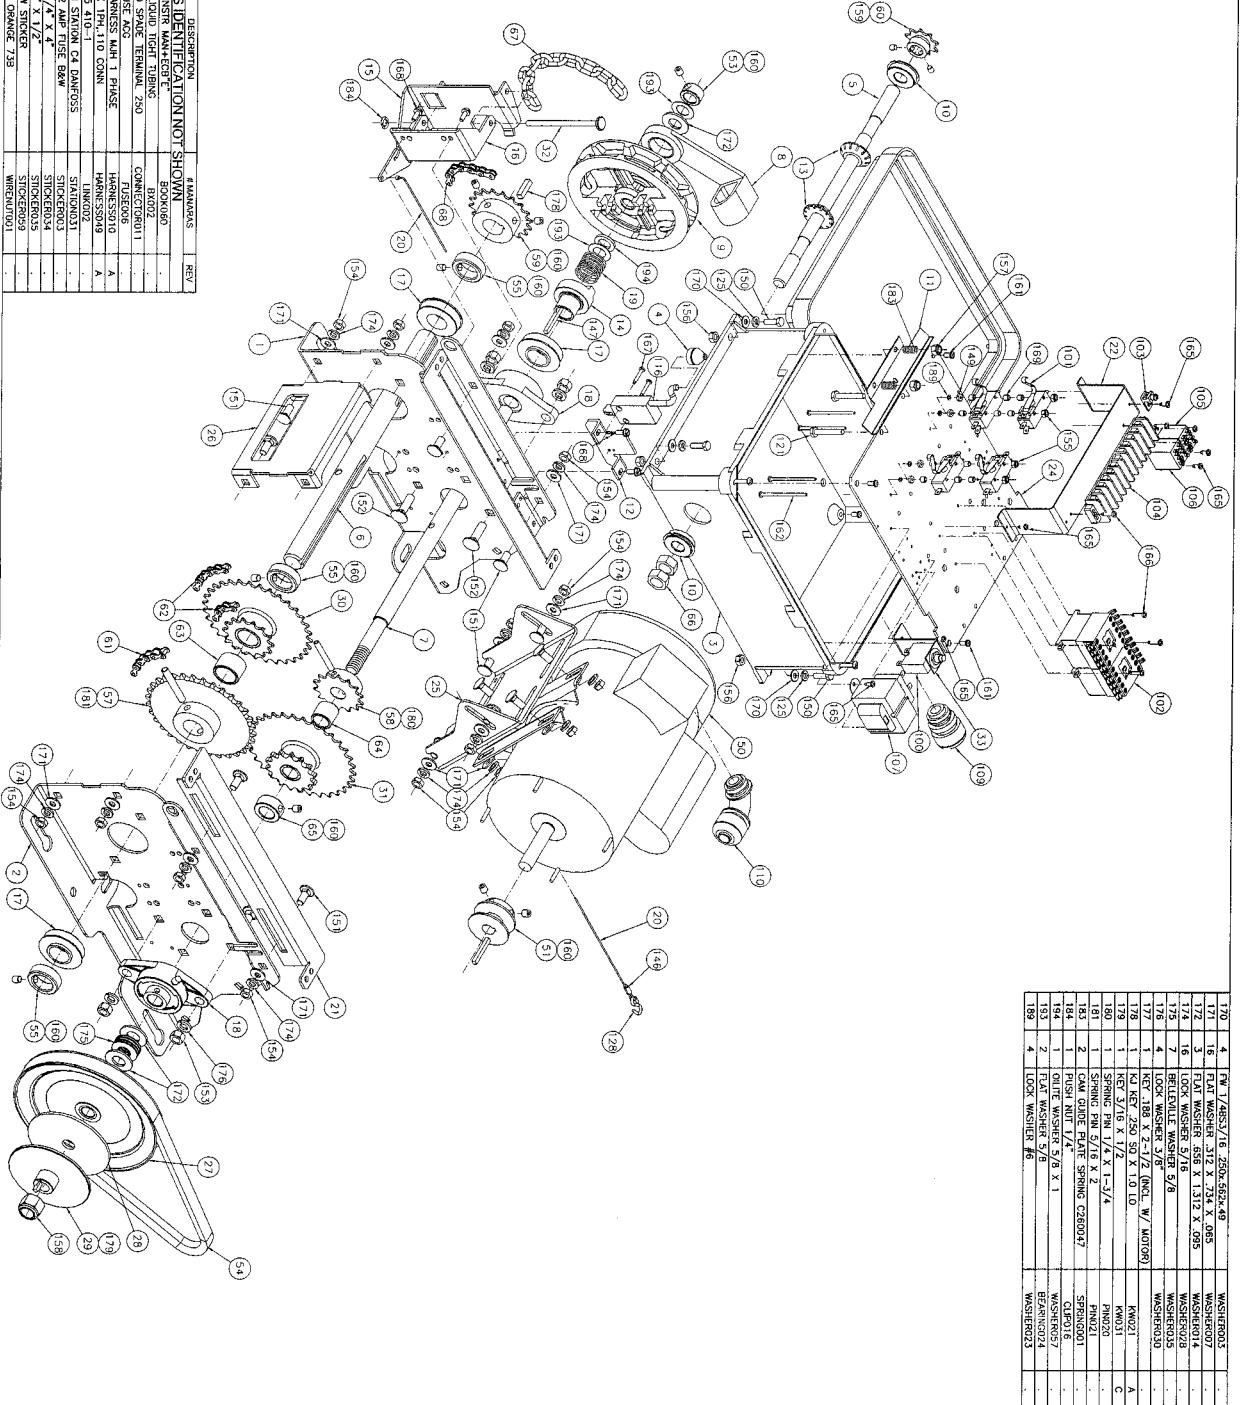


QTY	DESCRIPTION	#AMMANS	REV
1	LEFT HAND SIDE FRAME	FRAM007	A
2	RIGHT HAND SIDE FRAME	FRAM007	A
3	ROCKER N-4X 1/2 X 10 X 5	ROCK008	A
3	ROCKER N-4X 1/2 X 10 X 5	ROCK008	A
5	ROCK CAM LIMIT SWITCH 5/8-28X12	SWIT102	A
5	ROCK CAM LIMIT SWITCH 5/8-28X12	SWIT102	A
6	OSHW INPUT SHIRT	SHIR103	A
6	OSHW INPUT SHIRT	SHIR103	A
1	CHAM GEAR ROLLER	ROLL004	A
1	BEARING FLANGED 5/8 PRESSURE	BEAR005	A
10	4H/4H CAMPLATE N-1	CAMPL012	D
12	WP/QT-OUT-GRF SWITCH SUPPORT	BRCK0705	A
13	LIMIT CAM 5/8-24 UNEF	CAM004	A
15	DISCONNECT SWITCH PLATE	DISC009	A
16	OSHW FORK FOOT BRACKET	BRCK020	A
17	FLANGED BEARING 1" O.D. 5/8-11	BEAR007	A
18	FLANGED BEARING 1" O.D. 5/8-11	BEAR004	A
20	222 SPRING DISCS 109 1200	SPR004	A
21	OSHW WP/QT-GRF SWITCH SUPPORT	BRCK0705	A
22	WATERPROOF CHOX TIEOFF SUPPORT	BRCK0718	A
24	PLATE W/ GNDX WP/QT	PLAT079	A
25	MOTOR PLATE	PLAT078	A
26	FRACION FULLEY SL X 7"	PULL070	A
28	TORQUE LIMITER PLATE	CLUT0702	A
29	TORQUE SPRINGER	SPR0701	A
31	OSHW SPRINGER	SPR0702	A
32	DISCONNECT FORK TAIL	DISC022	A
33	DISCONNECT FORK TAIL	BRCK0709	A
50	MOTOR	MOT001	A
51	MOTOR FULLEY SL X 2"	PULL0714	A
54	Type B, inside length 29"	VEHL028	A
55	COLLAR 1"	COLL007	A
57	32 TOOTH 41 SPRACKET	SPR0703	A
58	SPR0703 41X75	SPR0703	A
60	SPR0703 41X75	SPR0703	A
61	CHAM 41 48P (WITH CHAM LINK)	CHAM008	A
62	CHAM 41 48P (WITH CHAM LINK)	CHAM008	A
64	SPR0703	SPR0703	A
65	COLLAR 3/4"	COLL005	A
66	LIMIT SWIT LOCK NUT 5/8-24	NUT015	A
67	42 P	CHAM002	A
100	1 RESIST #110 500 ohm	RES001	A
101	4 SINGLE EM SW-LEVER	LIMIT01	A
102	CONNECTOR	CONN0604	A
103	GROUND LUGS	CONN0603	A
105	RELAY 120V OR 240V 6PDT	TRANS001	A
106	1 RELAY 24V DPDT	TRANS002	A
107	1 BY CONNECTOR WATERPROOF 890P	TRANS003	A
109	1 BELTIC LIMIT SWITCH	ASAP0702	A
116	1 HEX HEAD BOLT 1/4 X 1-1/2	BOL1005	A
126	4 LOCK WASHER 1/4"	WASH0702	A
128	1 "S" HOOD	HOOD001	A
142	1 SQUARE HEX 5/16 X 3/16 X 1-3/4	NUT002	A
149	4 HEX NUT 6/32	BOL1002	A
150	4 HEX HD 205-20UNC X 7/8	BOL1003	A
151	18 GERRAGE BOLT 5/16-18UNC X 3/4	BOL1003	A
153	4 1/8 SERR	NUT018	A
154	16 HEX NUT 5/16-18UNC	NUT018	A
155	4 NTON LOCK NUT 6-32UNC	NUT018	A
156	4 NUT 250-20 UNC 1/4-20UNC	NUT018	A
159	2 NTON LOCK NUT 1/4-20UNC	NUT018	A
159	2 SET SCREW 1/4-28-7/8	SCREW003	A
160	9 MACHINE SCREW 5/16-18UNC X 5/16	SCREW003	A
161	4 MACHINE SCREW 5/16-18UNC X 3/8	SCREW003	A
162	10 MACHINE SCREW 5/16-18UNC X 1/2	SCREW003	A
166	6 SELF TAPPING SCREW 5/16 X 1/2	SCREW006	A
167	2 SELF TAPPING SCREW 5/16 X 1/2	SCREW006	A
169	19 LIMIT SWITCH SPACER 1/4 X 3/4 X 1/2	SPACR001	A
170	4 FLY WASHERS	WASH003	A

QTY	DESCRIPTION	#AMMANS	REV
170	4 FLY WASHERS 1/16 250-55X 40	WASH003	A
171	16 FLY WASHERS 3/12 X 734 X .065	WASH007	A
172	3 FLY WASHERS 5/8 X 1.312 X .065	WASH007	A
173	16 LOCK WASHER 5/16	WASH008	A
174	4 LOCK WASHER 5/8	WASH008	A
175	4 LOCK WASHER 3/8	WASH008	A
176	KEY 148 X 2-1/2 (O.K.L. W/ MOD98)	KEY001	A
177	4 KEY 148 X 2-1/2 (O.K.L. W/ MOD98)	KEY001	A
178	1 KEY 250 SQ X 1.0 TO	KEY001	A
179	1 KEY 250 SQ X 1.0 TO	KEY001	A
180	1 SPRING PIN 5/16 X 2 X 2	SPR001	A
181	1 SPRING PIN 5/16 X 2 X 2	SPR001	A
182	1 PUSH NUT 1/4"	CLIP016	A
183	2 CAM GEAR PLATE SPRING C26004	WASH007	A
184	1 LOCK WASHER 3/8 X 1	WASH004	A
189	4 LOCK WASHER 3/8	WASH003	A


OPERAH-W

AMMANS AUTO DOORS INC.
 P.O. BOX 148
 P.O. BOX 148
 TEL: 514-426-1332
 FAX: 514-426-1171

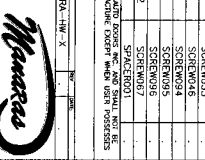

Schema électrique simple phase CCE

WIRING DIAGRAM FOR 1-PHASE OPERATOR- MODEL : MTHMTBMHGMHGMGTMSL/D/OP/J10PH/OSH

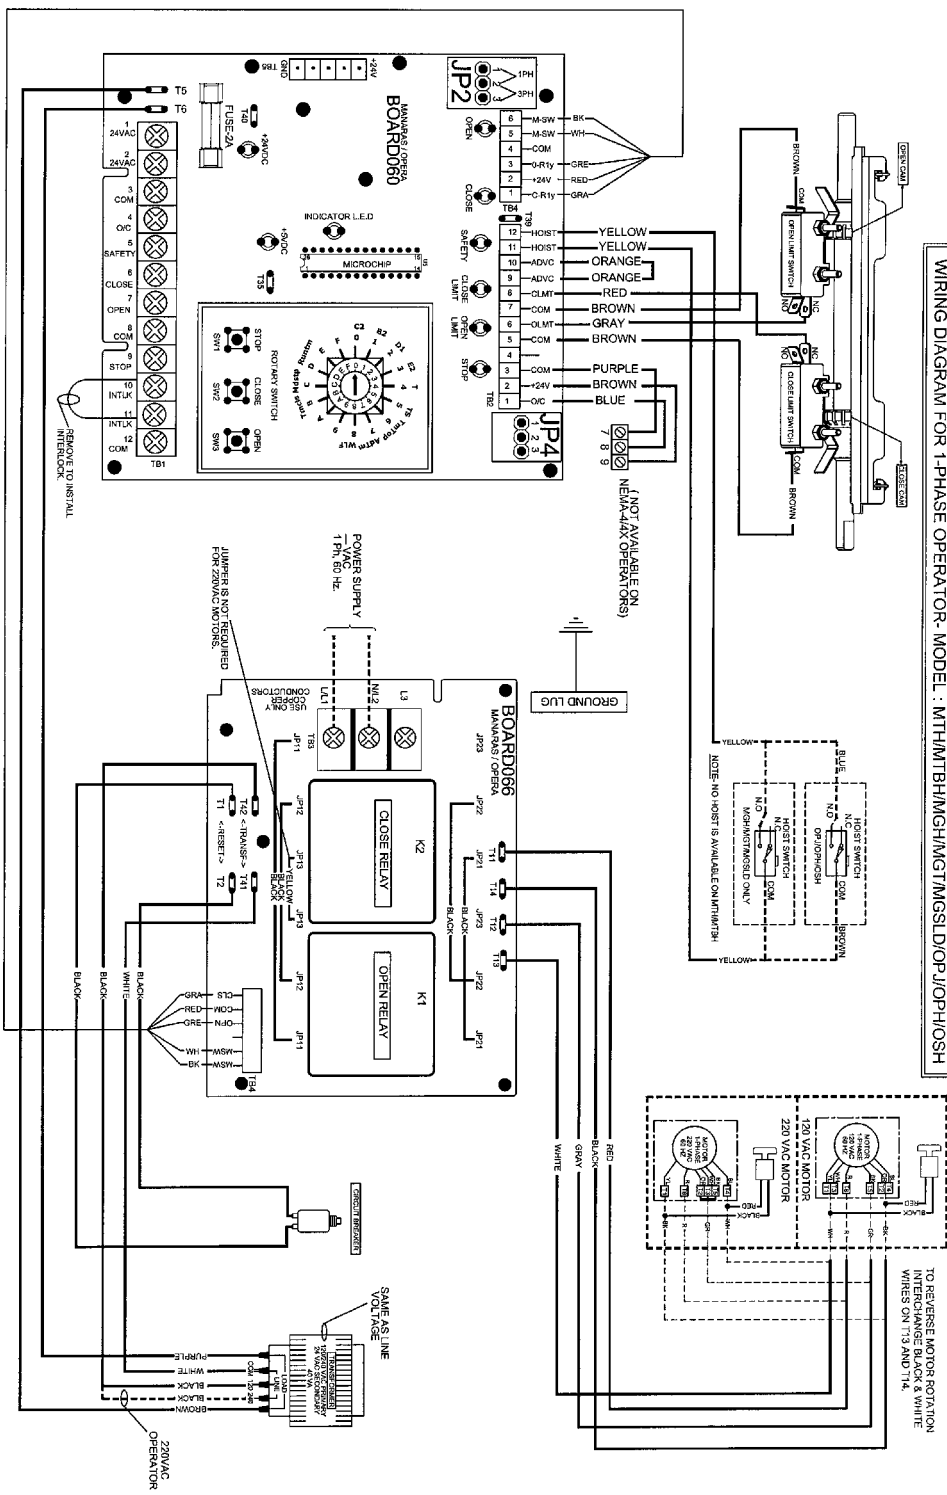

TO REVERSE MOTOR ROTATION INTERCHANGE BLACK & WHITE WIRES ON T13 AND T14.

ROTARY SWITCH SETTINGS

WIRING TYPES	PROGRAM SETTINGS
1 B2 WIRING A B C D E F G H I J K L M N O P Q R S T U V W X Y Z	6 MID-STOP TIMER TO CLOSE A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
2 D1 WIRING A B C D E F G H I J K L M N O P Q R S T U V W X Y Z	7 ADV. CLOSE TIME A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
3 E2 WIRING A B C D E F G H I J K L M N O P Q R S T U V W X Y Z	8 WARNING LIGHT TIMER A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
4 T WIRING A B C D E F G H I J K L M N O P Q R S T U V W X Y Z	B TIMER TO CLOSE A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
5 TS WIRING A B C D E F G H I J K L M N O P Q R S T U V W X Y Z	C MID-STOP A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
	D RUN TIMER A B C D E F G H I J K L M N O P Q R S T U V W X Y Z

ON BOARD JUMPER SETTINGS

120 VAC/20VAC	JP2 1 2 3 ● ● ●	JP1 (DISCONNECT) ● ● ● SWITCH PRESENT NOT PRESENT
240VAC/1PH	1 2	1 2 2,3

WARNING LIGHT/RECEIVER MODULE

TBS CONNECTION FOR WARNING LIGHT AND RECEIVER MODULE. (CONSULT FACTORY)

NOTE:
FOR ROTARY SWITCH SETTINGS AND PROGRAMMING PROCEDURES, REFER TO INSTRUCTION MANUAL.

EXTERNAL WIRING

LINE POWER	EXTERNAL INTERLOCK	SAFETY REVERSE	OPEN/CLOSE COMMAND	SINGLE PUSH-BUTTON STATION	TWO PUSH-BUTTON STATION
L1 1 N1/2 2 1 2 24 VAC POWER 23 VAC POWER MOTION DETECTOR APPROXIMATE 10A MAX	10 11 FACTORY INSTALLED JUMPER REMOVE IF EXTERNAL INTERLOCK IS USED.	3 5 CONTACT FOR SAFETY EDGE/SAFETY DEVICE	3 4 CONTACT FOR OPEN/CLOSE DEVICE	6 7 8 9 NOTE PLACE A JUMPER BETWEEN TERMINALS 6 AND 8. IF STOP BUTTON IS NOT USED.	6 7 8 9 P.B. SW1 P.B. SW2

Pour la connexion du récepteur radio référer à la page 3

THE INFORMATION CONTAINED HEREIN IS PROPRIETARY TO MANARAS/OPERA AND SHALL NOT BE REPRODUCED OR DISCLOSED OR USED FOR ANY DESIGN OR MANUFACTURE EXCEPT WHEN USER POSSESSES DIRECT WRITTEN AUTHORIZATION FROM MANARAS/OPERA.


TITLE: WIRING DIAGRAM, 120/208/220VAC, 1-PHASE (Nema-4)

MANARAS/OPERA 9140-0720 QUEBEC INC.
158 ONEIDA DRIVE
TOWNSHIP OF LAKE CHARLES, QC H9R 1A8
FAX: 514-426-4330

DATE: 15 NOV 2006
DRAWN BY: B9
CADD FILE: B9R353.W
REV DATE: 13 FEB 2007

Schema électrique 3- phase CCE

WIRING DIAGRAM FOR 1-PHASE OPERATOR - MODEL : MTH/MTB/MGM/GMGT/MGSLD/OP/JOH/OSH

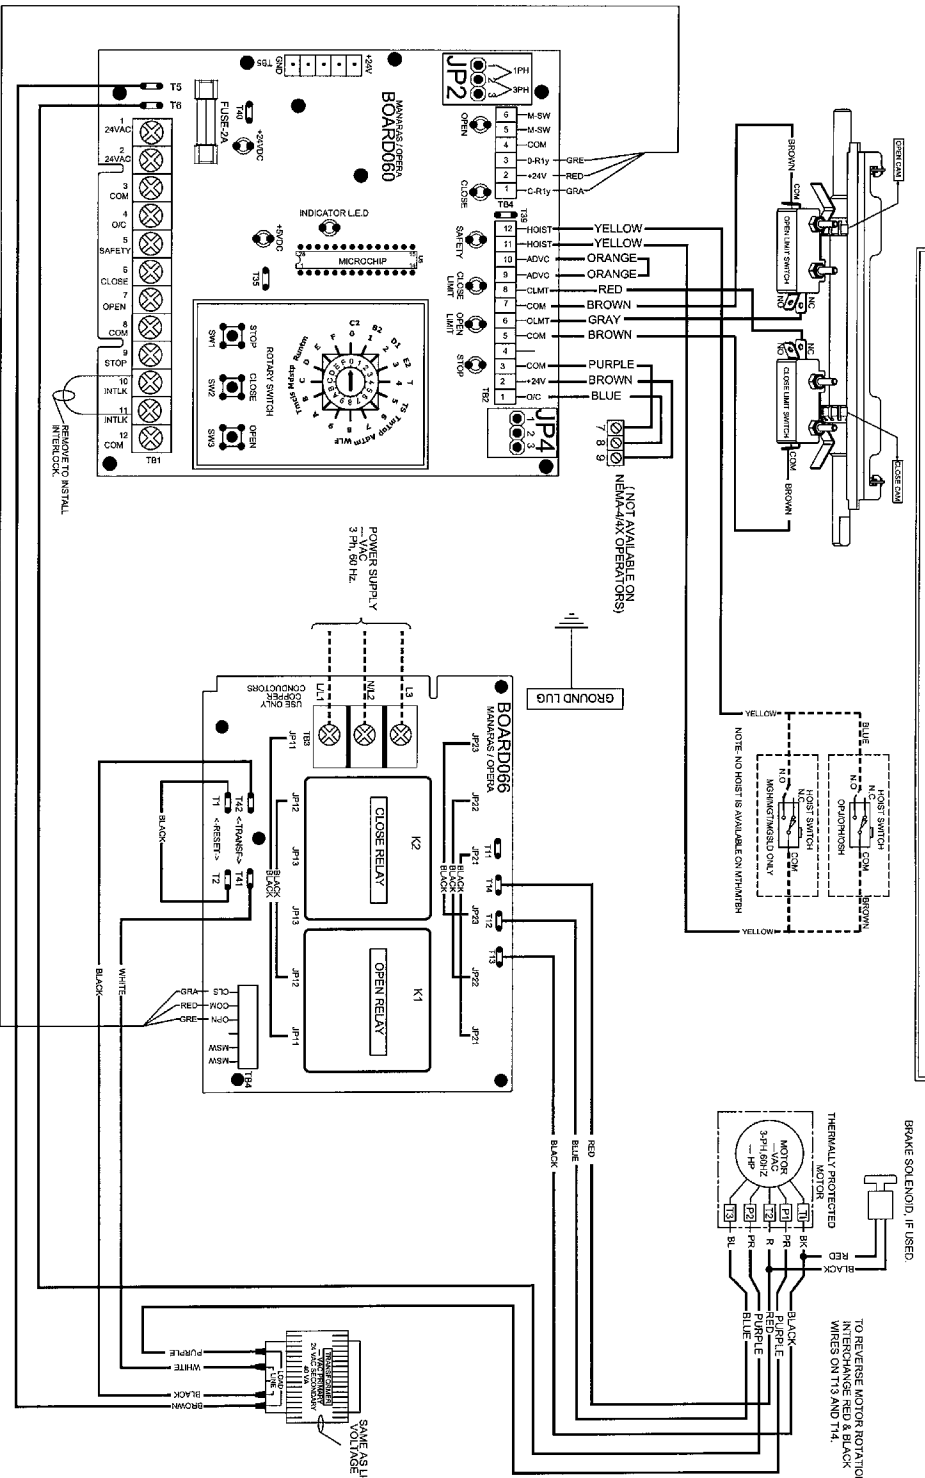

LINE POWER	24 VAC POWER	EXTERNAL INTERLOCK	SAFETY REVERSE	OPEN/CLOSE COMMAND	SINGLE PUSH-BUTTON STATION	TWO PUSH-BUTTON STATION
L1,1 N1,2 L3 POWER SUPPLY 3 Ph, 60 HZ	1 2 24 VAC POWER MOTION DETECTOR AVAILABLE TOTAL MAX	10 11 FACTORY INSTALLED JUMPER REMOVE IF EXT. INTERLOCK IS USED.	3 5 SAFETY REVERSE CONTACT FOR SAFETY REVERSE/SAFETY DEVICE	3 4 OPEN/CLOSE COMMAND CONTACT FOR OPEN/CLOSE DEVICE	9 8 7 6 NOTE: PLACE A JUMPER BETWEEN TERMINALS 8 AND 9 IF STOP BUTTON IS NOT USED.	7 8 9 P.B. S#1 P.B. S#2

EXTERNAL WIRING	
<p>ATTENTION: USE 18AWG OR HIGHER FOR WIRING ALL EXTERNAL CONNECTIONS</p>	<p>FOR ROTARY SWITCH SETTINGS AND PROGRAMMING PROCEDURES, REFER TO INSTRUCTION MANUAL.</p>

ROTARY SWITCH SETTINGS	
0 WIRING C2	6 MID-STOP TIMER TO CLOSE
1 WIRING R2	7 ADV. CLOSE TIME
2 WIRING D1	8 WARNING LIGHT TIMER
3 WIRING E2	B TIMER TO CLOSE
4 WIRING T	C MID-STOP
5 WIRING TS	D RUN TIMER

ON BOARD JUMPER SETTINGS

208/480/575 VAC 2,3

JP2 (ON/CONNECT) (OFF/DISCONNECT)

1,2,3

1,2 2,3

WARNING LIGHT/RECEIVER MODULE

TBS AND RECEIVER MODULE (CONSULT FACTORY)

Pour la connexion du récepteur radio réferer à la page 3

THE INFORMATION CONTAINED HEREIN IS PROPRIETARY TO MANARAS/OPERA AND SHALL NOT BE REPRODUCED OR DISCLOSED OR USED FOR ANY DESIGN OR MANUFACTURE EXCEPT WHEN USER POSSESSES DIRECT WRITTEN AUTHORIZATION FROM MANARAS/OPERA.

TITLE: WIRING DIAGRAM, 208/480/575VAC, 3- PHASE (Nema-4)

KNOWN BY: BP

DATE: 13 NOV 2003 CAD FILE: B63.T1N3 REV DATE: 13 FEB 2007

MANARAS/OPERA 9140-0720 QUEBEC INC.

336 ONEMIDA DRIVE

POINT-CLAIR, QC H8R 1A8


TEL: 1-800-361-0908

FAX: 1-800-525-0608



Schema électrique simple phase Circuit Electromécanique

DRAWING-M110P4X-W

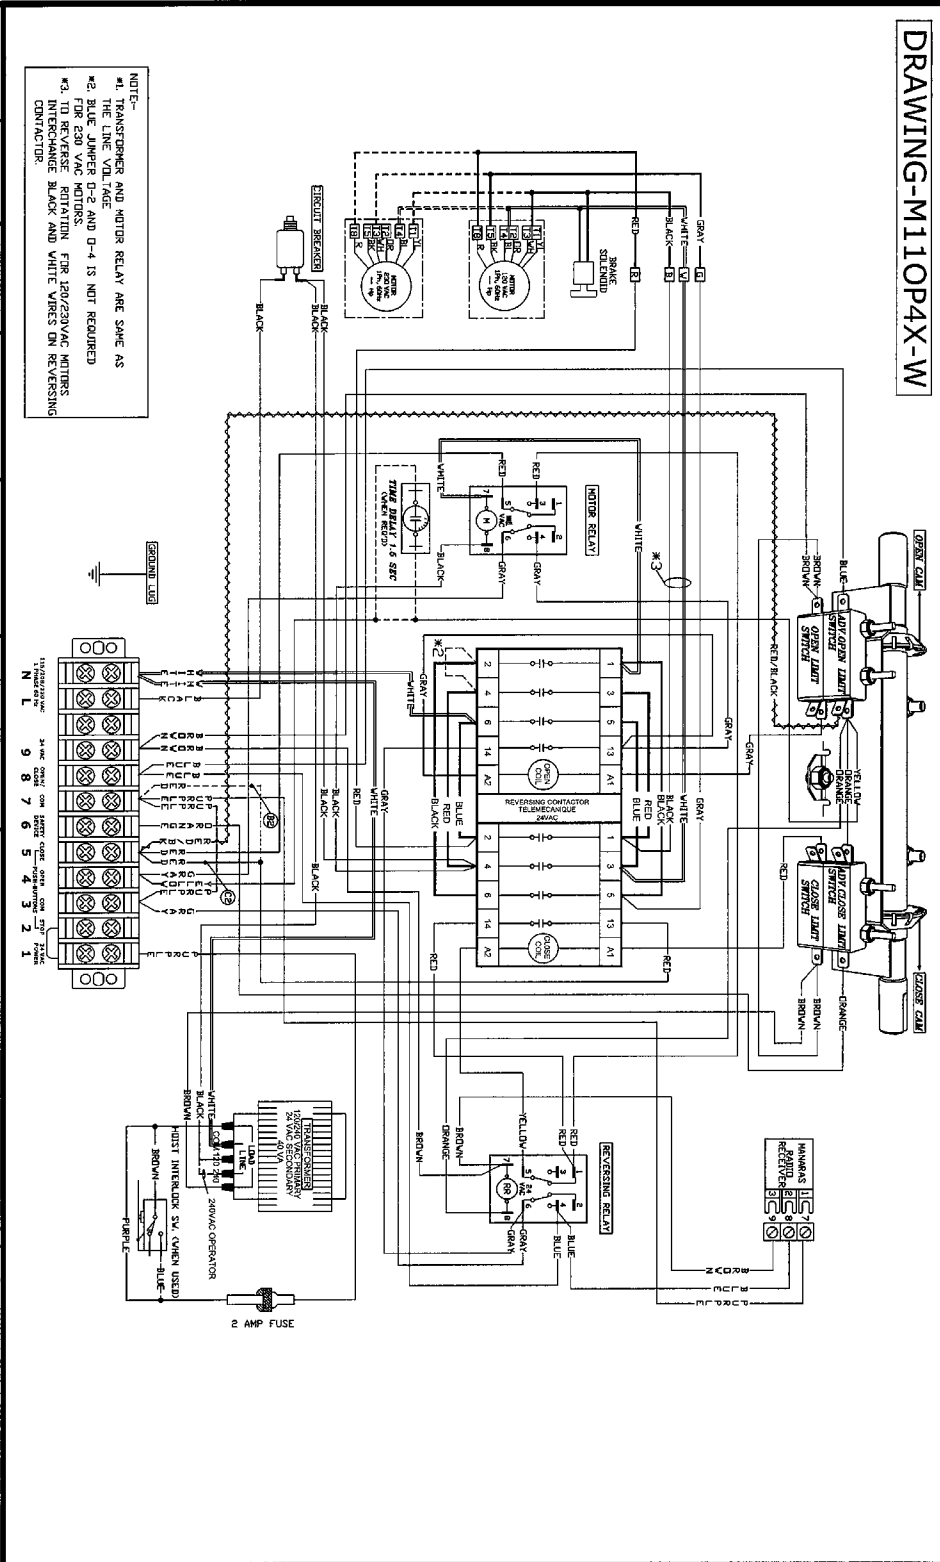

NOTE:
 #1. TRANSFORMER AND MOTOR RELAY ARE SAME AS #1. THE LINE VOLTAGE AND 0-4 IS NOT REQUIRED.
 #2. BLUE JUMPER D-2 AND D-4 IS NOT REQUIRED FOR 230 VAC MOTORS.
 #3. TO REVERSE ROTATION FOR 120/230VAC MOTORS INTERCHANGE BLACK AND WHITE WIRES ON REVERSING CONTACTOR.

LINE POWER	POWER 24 VAC	EXTERNAL INTERLOCK	SAFETY REVERSE	OPEN/CLOSE COMMAND	3-POSITION KEY SW. TO CENTRE	PUSH-BUTTON STATION	TWO PUSH-BUTTON STATION	RADIO RECEIVER
L4,1 M/2 POWER SUPPLY 110/220/230 VAC 1PH, 50/60HZ	1 9 24 VAC POWER AVAILABLE FOR ALK	1 2 REMOVE MECHANICAL INTERLOCK	3 6 CONTROL FOR SAFETY DEVICE	7 8 CONTROL FOR CLOSE DEPENDENCE	5 4 3 OPEN CLOSE KEY-SWITCH	5 4 3 2 STOP CAUTION: PLACE A JUMPER BETWEEN TERMINAL #2 AND #3 IF STOP BUTTON IS NOT USED.	5 4 3 2 STOP STOP	Pour la connexion de récepteur radio référer à la page 3

1 ON SITE MODIFICATIONS

NOTE: (C) / (B)

C2 → B2

1A REMOVE THE RED WIRE WITH RAPID CONNECTOR FROM TERMINAL #5, AND TRANSFER IT TO TERMINAL #7.

B2 → C2

1B REMOVE THE RED WIRE WITH RAPID CONNECTOR FROM TERMINAL #7, AND TRANSFER IT TO TERMINAL #5.

WARNING:
 MOTORISED DOORS CAN CAUSE SERIOUS INJURIES OR DEATH. MANARAS STRONGLY RECOMMENDS THE USE OF ENTRAPMENT PROTECTION SYSTEMS, ESPECIALLY IN THE CASES OF MOMENTARY CONTACT TO CLOSE AS IN B2 WIRING OR TIMER TO CLOSE.

2 CONSTANT PRESSURE OPEN

1. REMOVE THE GRAY WIRE FROM TERMINAL #3 AND PLACE IT ON TERMINAL #4

3 WIRING FOR INSTANT STOP (ON SAFETY EDGE OR DEVICE)

1. REMOVE THE YELLOW WIRE FROM ADV. OPEN LIMIT SWITCH, AND CAP IT.
 2. REMOVE THE BLUE WIRE FROM PIN #4 OR REVERSING RELAY(S) AND CAP IT.

4 ADDING A TIME DELAY ON REVERSE

ADV. OPEN U.S. CHANGE
 1. STRIKE THE YELLOW WIRE FROM ADV. OPEN LIMIT SWITCH, CONNECT THIS WIRE TO ONE END OF THE DELAY. OTHER END OF THE DELAY MUST BE CONNECTED BACK TO ADV. OPEN LIMIT SWITCH.

I.D. MODULE

5 CONSTANT PRESSURE OPEN & CLOSE - DI

PERFORM THE MODIFICATION EXPLAINED IN THE NOTES, **1B**, **2** AND **3**

6 ANY OTHER OPTIONS


FOR ANY OTHER OPTIONS LIKE: TIMER TO CLOSE, ADV-STOP WIRING, SPECIAL LOGIC SEQUENCE MODULE, OR ANY OTHER SPECIAL LOGIC SEQUENCE MODULE, CONTACT MANARAS AT 1-800-861-8280 / 1-888-77-6732 (USA)

WIRING DIAGRAM FOR OSE/OPH/OPF-4/AX 120/230 VAC, 1 PHASE, MOTORS

TITLE: M110P4X-W
 PROJECT: ES: A REV: 19 APR. 2005
 CLIENT: M.F.D. BY MANARAS AUTO DOORS INC.
 ENGINEER: M.F.D.
 DISTRIBUTOR: M.F.D. BY MANARAS AUTO DOORS INC.

Schema électrique 3-phase Electromécanique

DRAWING-M31OP4X-W

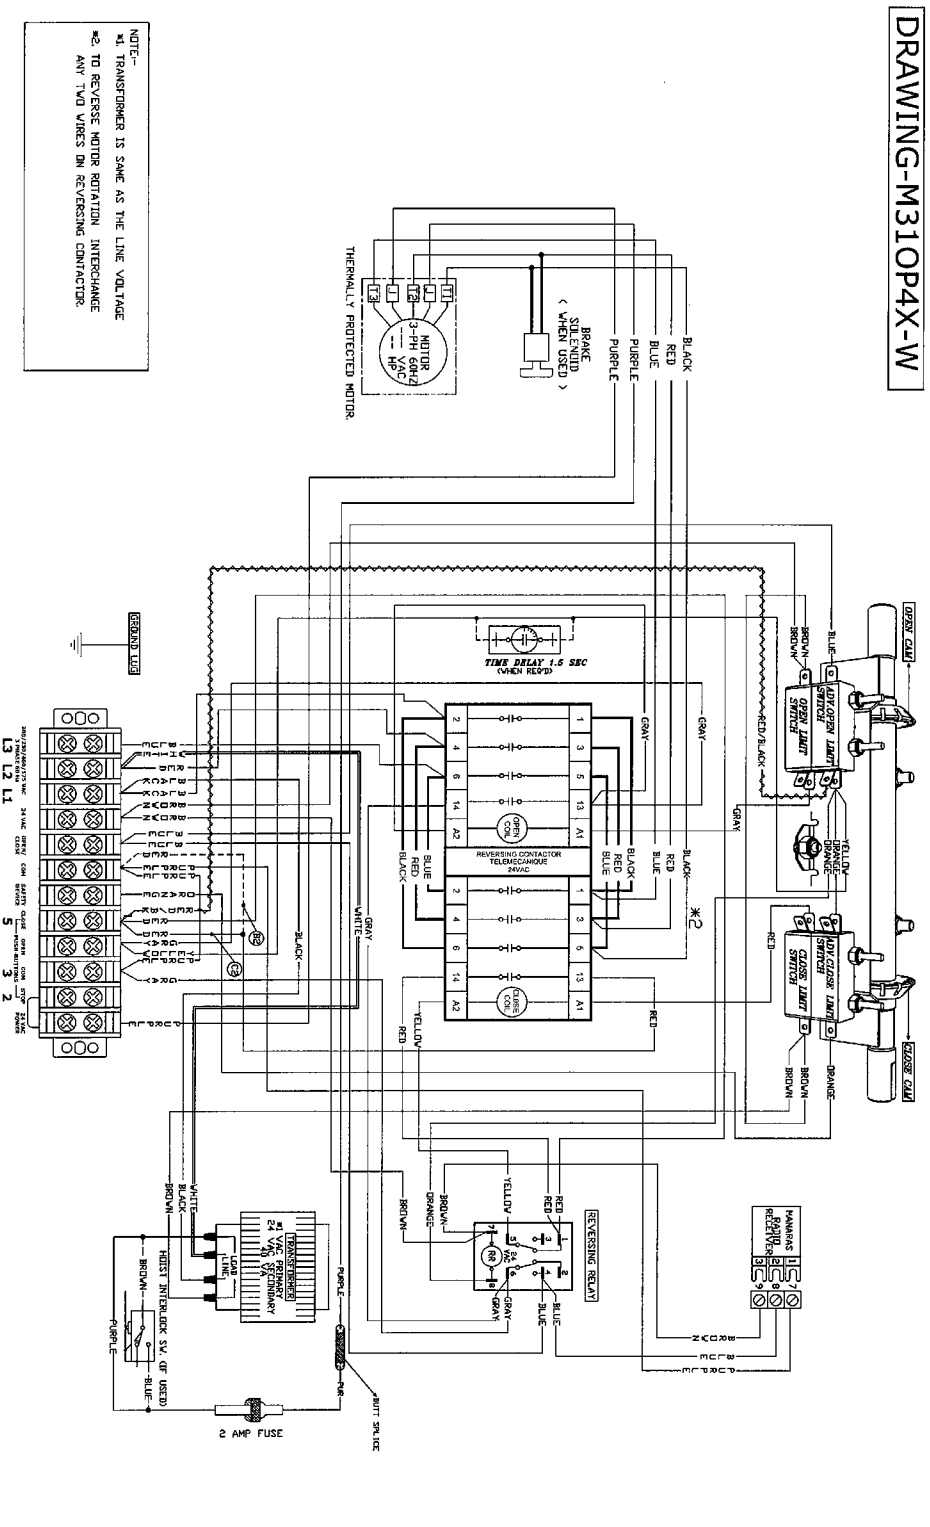

NOTE:
 #1 TRANSFORMER IS SAME AS THE LINE VOLTAGE
 #2 TO REVERSE MOTOR ROTATION INTERCHANGE
 ANY TWO WIRES ON REVERSING CONTACTOR

LINE POWER	POWER 24 VAC	EXTERNAL INTERLOCK	SAFETY REVERSE	OPENING/LOSE COMMAND	3 POSITION KEY SW. W/ RETURN TO CENTER	PUSH-BUTTON STATION	PUSH-BUTTON STATION	RADIO RECEIVER
L1 L2 L3	1 9	1 2	3 8	7 8	5 4 3	5 4 3 2	5 4 3 2	
POWER SUPPLY 208/240/275 VAC 575/600V	24 VAC POWER AVAILABLE IN VAC	REMOVE THE INTERLOCK CONTACT FOR SAFETY DEVICE	CONTACT FOR SAFETY DEVICE	CONTACT FOR OPEN/LOSE DEVICE	KEY-SWITCH			

ATTENTION: USE 18AWG OR HIGHER FOR WIRING ALL EXTERNAL CONNECTIONS

1 ON SITE MODIFICATIONS

NOTE: C2 ↔ B2
 B2 ↔ C2

1A REMOVE THE RED WIRE WITH RAPID CONNECTOR FROM TERMINAL #5, AND TRANSFER IT TO TERMINAL #7.

1B REMOVE THE RED WIRE WITH RAPID CONNECTOR FROM TERMINAL #7, AND TRANSFER IT TO TERMINAL #5.

WARNING:
 MOTORISED DOORS CAN CAUSE SERIOUS INJURIES OR DEATH. MANNARAS STRONGLY RECOMMENDS THE USE OF ENTRAPMENT PROTECTION SYSTEMS, ESPECIALLY IN THE CASES OF MOMENTARY CONTACT TO CLOSE AS IN B2 WIRING OR TIMER TO CLOSE.

2 CONSTANT PRESSURE OPEN

3 REMOVE THE GRAY WIRE FROM TERMINAL #3 AND PLACE IT ON TERMINAL #4
WIRING FOR INSTANT STOP (ON SAFETY EDGE OR DEVICE)
 1. REMOVE THE YELLOW WIRE FROM ADV. OPEN LIMIT SWITCH, AND CAP IT.
 2. REMOVE THE BLUE WIRE FROM PIN #4 OR REVERSING RELAY(R) AND CAP IT.

4 ADDING A TIME DELAY ON REVERSE

5 CONSTANT PRESSURE OPEN & CLOSE - DI PERFORM THE MODIFICATION EXPLAINED IN THE NOTES **1B**, **2** AND **3**

6 ANY OTHER OPTIONS

FOR ANY OTHER OPTIONS LINE, TIMER TO CLOSE, AND STOP WIRING, LONG DISTANCE MODULE, PLEASE CONSULT MANNARAS AT 1-800-561-2800/1-866-77-6792(USA).

WIRING DIAGRAM FOR OSF/OPH/OP1-4/4X 208/460/575 VAC, 3 PHASE MOTORS

Pour la connexion de récepteur radio référer à la page 3

MANNARAS
 Security International

MP.D. BY MANNARAS AUTO DOORS INC.