
 
 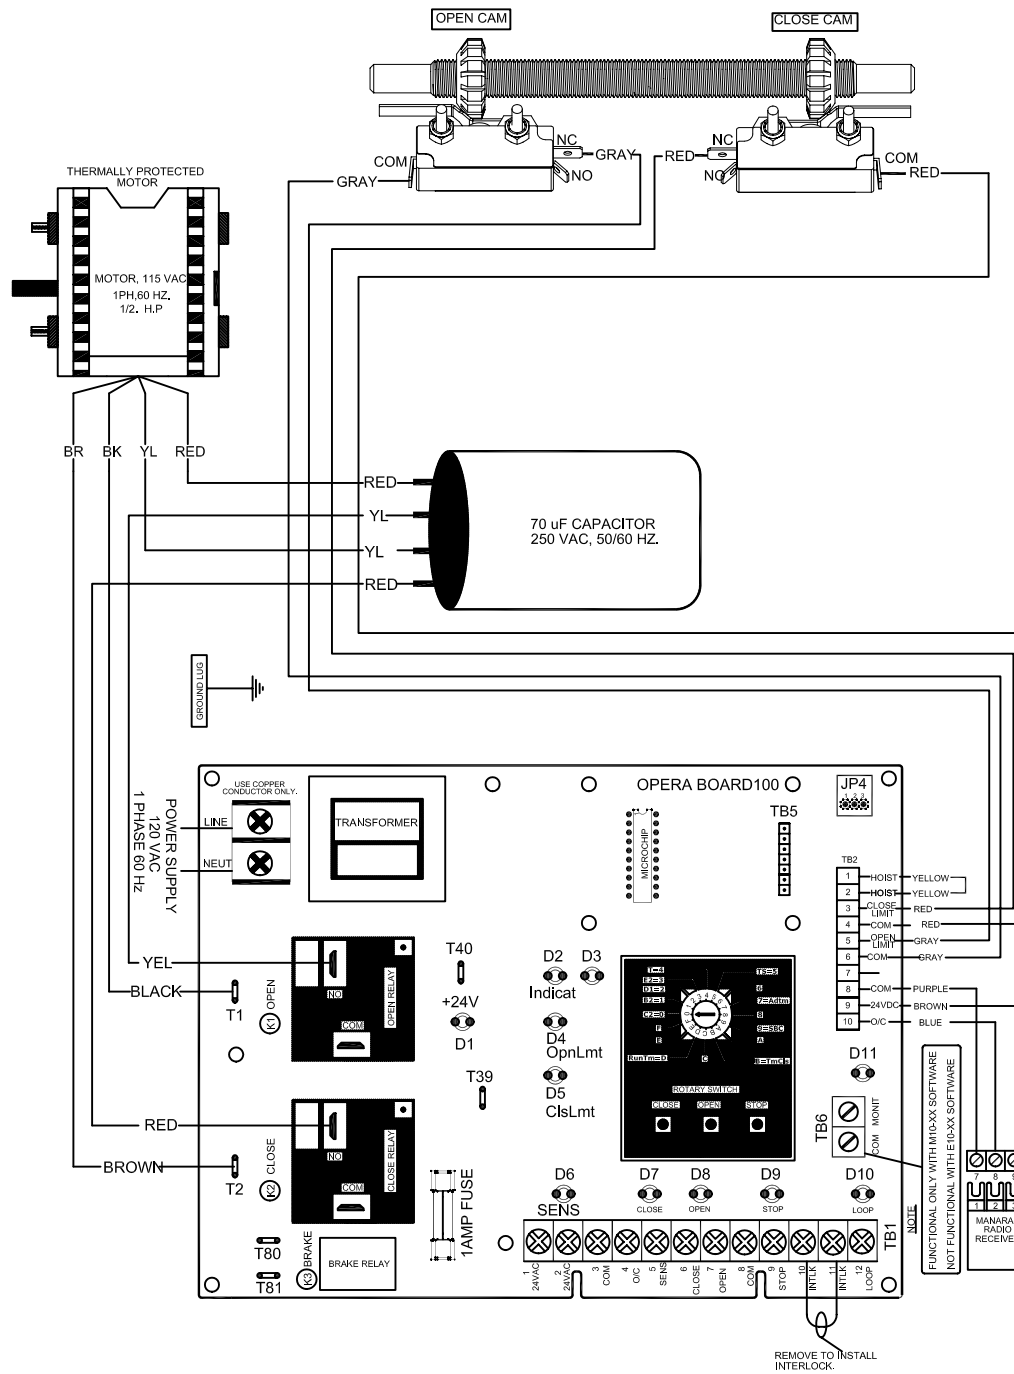
 
 
 
 


WIRING DIAGRAM FOR 1 PHASE OPERATOR - MODEL : MLT

 


ROTARY SWITCH SETTINGS

WIRING TYPES




PROGRAM SETTINGS




JUMPER SETTINGS

JP4 (DISCONNECT) SWITCH	
PRESENT	NOT PRESENT
1,2	2,3

 

NOTE:-  
FOR ROTARY SWITCH SETTINGS AND PROGRAMMING PROCEDURES, REFER TO INSTRUCTION MANUAL

EXTERNAL WIRING

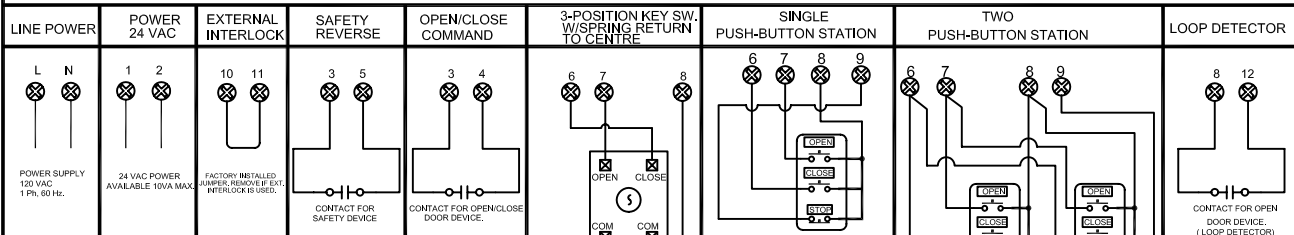


- WARNING**
- USE 18AWG OR HIGHER FOR WIRING ALL EXTERNAL CONNECTIONS
  - MOTORIZED DOORS CAN CAUSE SERIOUS INJURIES OR DEATH. MANARAS STRONGLY RECOMMENDS THE USE OF ENTRAPMENT PROTECTION SYSTEMS, ESPECIALLY IN THE OF CASE MOMENTARY CONTACT TO CLOSE AS IN B2 WIRING

THE INFORMATION CONTAINED HEREIN IS PROPRIETARY TO MANARAS-OPERA AND SHALL NOT BE REPRODUCED OR DISCLOSED OR USED FOR ANY DESIGN OR MANUFACTURE EXCEPT WHEN USER POSSESSES DIRECT WRITTEN AUTHORIZATION FROM MANARAS-OPERA

TITLE: WIRING DIAGRAM- MEDIUM DUTY, 120 VAC 1-PH  
 DRAWN BY: BP DATE: 20, JAN, 2010 CAD FILE: MECB11-S100-MLT-W REV: B DATE: 27, OCT, 2010  
 MANARAS-OPERA  
 136 ONEIDA DRIVE  
 POINTE-CLAIRE, QC H9R 1A8  
 TEL: 1-800-361-2260  
 FAX: 1-888-626-0606

TIMER TO CLOSE PROGRAMMING

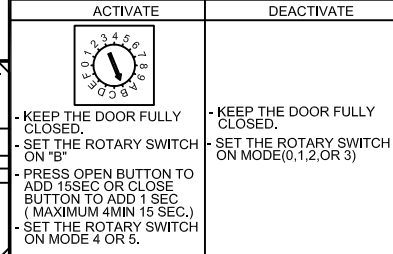

MONITORED PHOTOCELL

