


⚠ WARNING

TO REDUCE THE RISK OF SEVERE INJURY OR DEATH TO PERSONS:


1. READ AND FOLLOW ALL INSTALLATION INSTRUCTIONS.
2. Disconnect power to access device before installing the receiver or servicing this unit.
3. Activate the door ONLY when it can be seen clearly, is properly adjusted, and there are no obstructions to the door travel.
4. NEVER permit anyone to cross the path of a closing door.

Introduction

The receiver is an access control receiver capable of having up to 1000 remote controls. Each remote control can be individually added, deleted, or temporarily disabled.

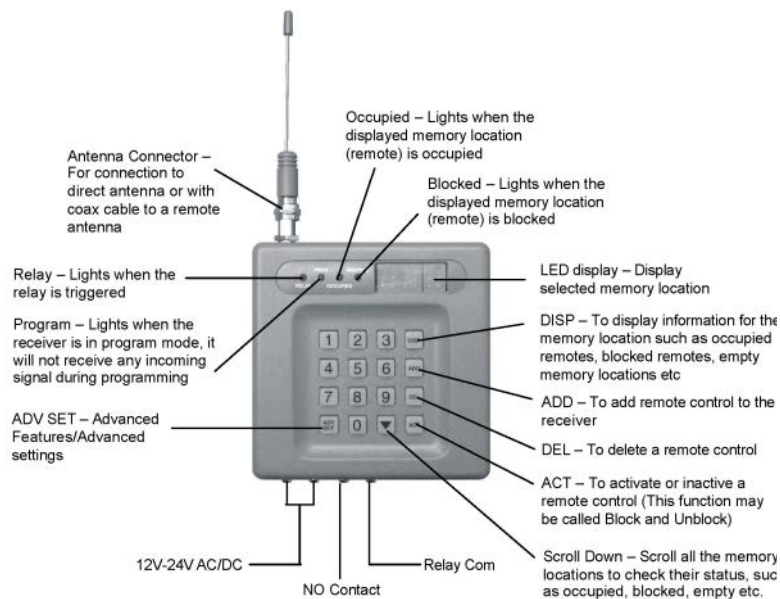

Compatibility

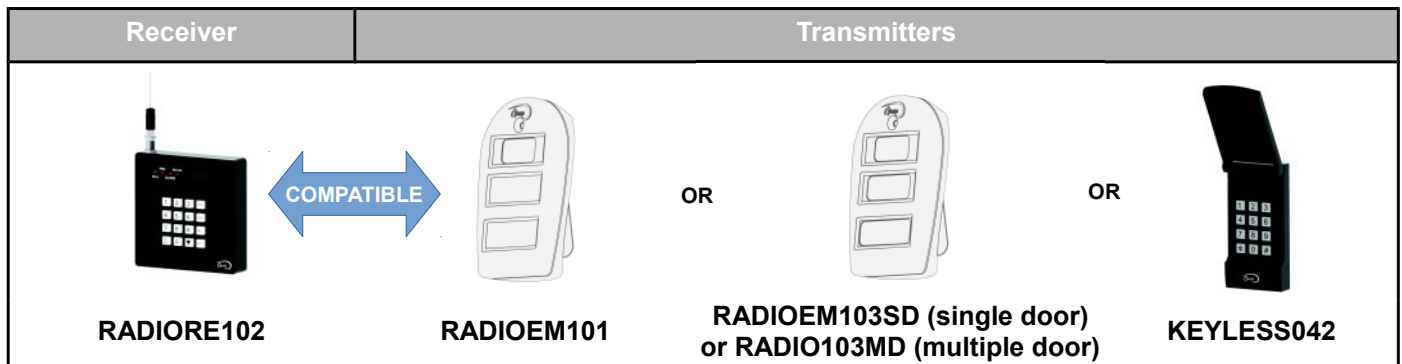




RADIORE102 - Multi Receiver

Specifications and Installation Instructions

Installation Instructions

1. Hang the receiver with 2 screws (provided in the package).
2. Connect the Radio's "N.O. Contact" to Terminal #3 on the Manaras-Opera ECB.
3. Connect the Radio's "Relay Com" to Terminal #4 on the Manaras-Opera ECB.
4. Connect the Radio's "12V-24VAC/DC" to Terminal #1 and #2 on the Manaras-Opera ECB.

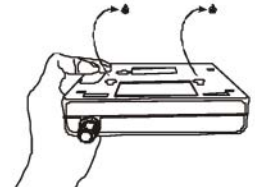

Operation – Basic Functions

Add Remote Controls to Auto Assigned Location:

Press	Display	Press	Display	Press	Exit
ADD	000	ADD	Add 000	Press the button of the desired remote.	2x DISP

- ▶ The receiver will beep 3 times to confirm the programming of the memory location (000). The display will then show the next available memory location.
- ▶ Add another remote by pressing its button.

Delete a Remote Control:

This sequence let you delete the remote control(s) from the memory location e.g. 123.

Press	Display	Press	Display	Press	Exit
DEL	000	123 + DEL	dEL 123	DEL	2x DISP

- ▶ The receiver will beep 3 times to confirm that the memory location (123) is deleted.
- ▶ Enter another memory location to delete.

Block a Remote Control (Inactivate):

This sequence let you temporary disable specific remote control(s) from the memory location e.g. 123.

Press	Display	Press	Display	Press	Exit
ACT	000	123 + ACT	bLc 123	ACT	2x DISP

- ▶ The receiver will beep 3 times to confirm that the memory location (123) is blocked. If the receiver receives a signal from a blocked memory location, a longer beep will be made and the memory location will be displayed. However, the relay won't be activated.
- ▶ Enter another memory location to block.

Unblock a Remote Control (Activate):

This sequence let you reactivate the blocked remote control(s), e.g. 123.

Press	Display	Press	Display	Press	Exit
ACT	000	123 + ACT	Unb 123	ACT	2x DISP

- ▶ The receiver will beep 3 times to confirm that the memory location (123) is unblocked.
- ▶ Enter another memory location to unblock.

For further information, please consult the operator's Installation & Instruction Manual or contact our Technical Support Department at **1-800-361-2260**.