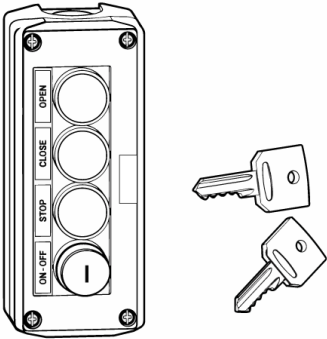


WARNING


TO REDUCE THE RISK OF SEVERE INJURY OR DEATH TO PERSONS:

1. READ AND FOLLOW ALL INSTALLATION INSTRUCTIONS.
2. All electrical wiring should be done by a qualified professional and in accordance to local electrical codes.
3. Always shut OFF the main power before performing any electrical intervention.
4. Locate the control station: (a) within sight of the door, and (b) at a minimum height of 5 feet (1,5 m) above floors, landings, steps or any other adjacent walking surface and (c) away from all moving parts of the door.
5. Install the Entrapment Warning Placard next to the control station in a prominent location.

Technical Data - STATION079


 1 x Control Station 2 x Keys	Description	3-button: Open/close/stop command, key lock-out
	Contacts	2 NO and 1 NC (stop) contacts, 1 NO contact (key)
	Operator Operating Mode	B2 or C2 wiring (momentary contact to open/close or momentary-contact-to-open/stop and constant pressure-to-close
	Mounting	Surface mount
	Installation	Interior/exterior use
	Materials	Polycarbonate
	Protection Class	IP66, Nema 4, 4X, 12, 13 enclosure
	Operation Temperature	-13 °F to +158 °F (-25 °C to +70 °C)
	Enclosure Certifications	UL Listed and CSA
	Contact Certifications	UL Listed and CSA
	Contact Ratings	0.1A @ 600VDC, 0.27A @ 250VDC, 0.55A @ 125VDC, 1.2A @ 600VAC, 3A @ 240VAC, 6A @ 120VAC
	 Consult the specifications sheet	

Dimensions

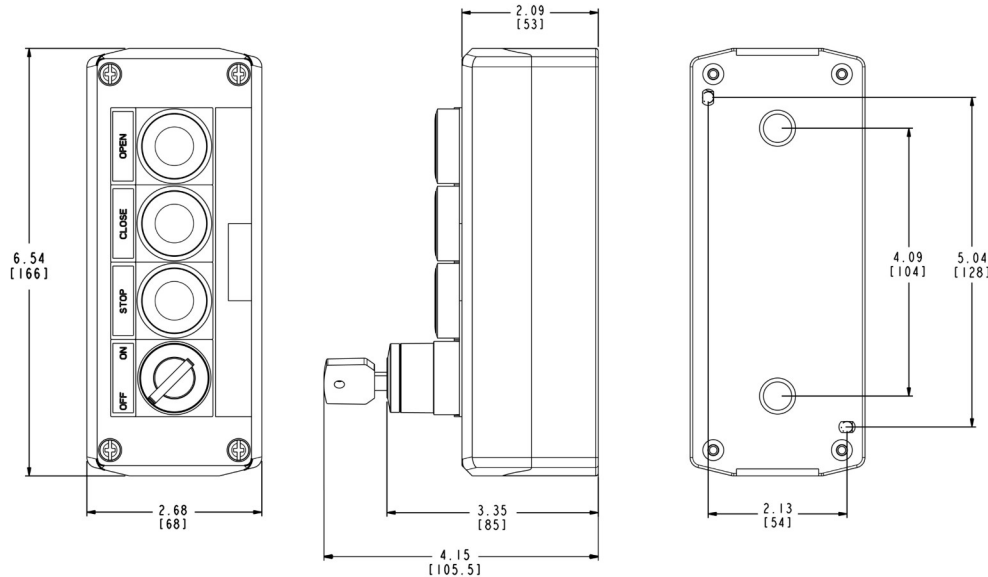

Installation and Wiring Instructions for STATION079:


1. Select a spot on the wall within sight of the garage door, at least 5 feet (1.5 m) above the floor, steps, landing or any other adjacent walking surface and away from all moving parts of the door.
2. The station must be far enough away from the door that a person operating it cannot be struck by or caught in any moving parts.
3. Disconnect power to the operator.
4. Hold the back plate against the wall at your marked height, use a pencil to mark the screw holes, drill pilot holes, and secure the plate using the provided mounting screws.
5. Properly wire the control station to the garage door operator, referring to image below. If installing more than one control station on the same door, please refer to the following page for wiring instructions.
6. The Entrapment Warning Placard (supplied with the operator) must be installed directly next to the control station. It serves as a constant visual reminder of the risk of injury or entrapment.
7. Route the wires neatly along the wall to the garage door operator, securing it with insulated staples.
8. Restore power to the garage door operator, and press the push-buttons to test operation.
9. Regular maintenance of the control station will ensure its longevity and reliability. This includes periodically checking the wiring connections and keeping the control station clean and free from debris.

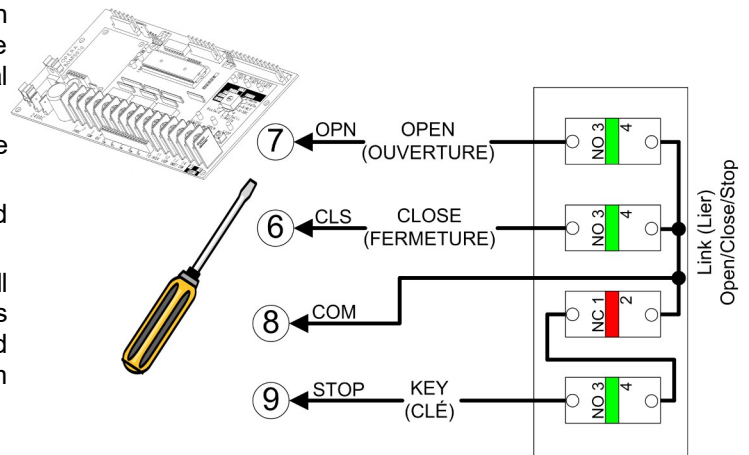


Wiring Instructions for Special Applications

Installing two control stations on opposite sides of the same door requires a parallel wiring set-up for standard momentary contact buttons.

⚠ Weather Rating: Ensure the exterior control station carries a proper weatherproof rating (such as NEMA 4 or 4X) to prevent moisture damage.

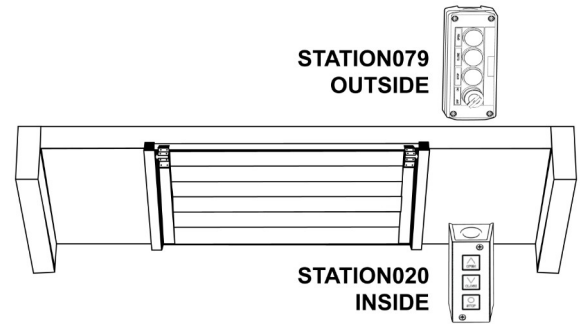


Application 1: STATION079 and STATION020 (or another 3PBS station) → Key locks both control stations.

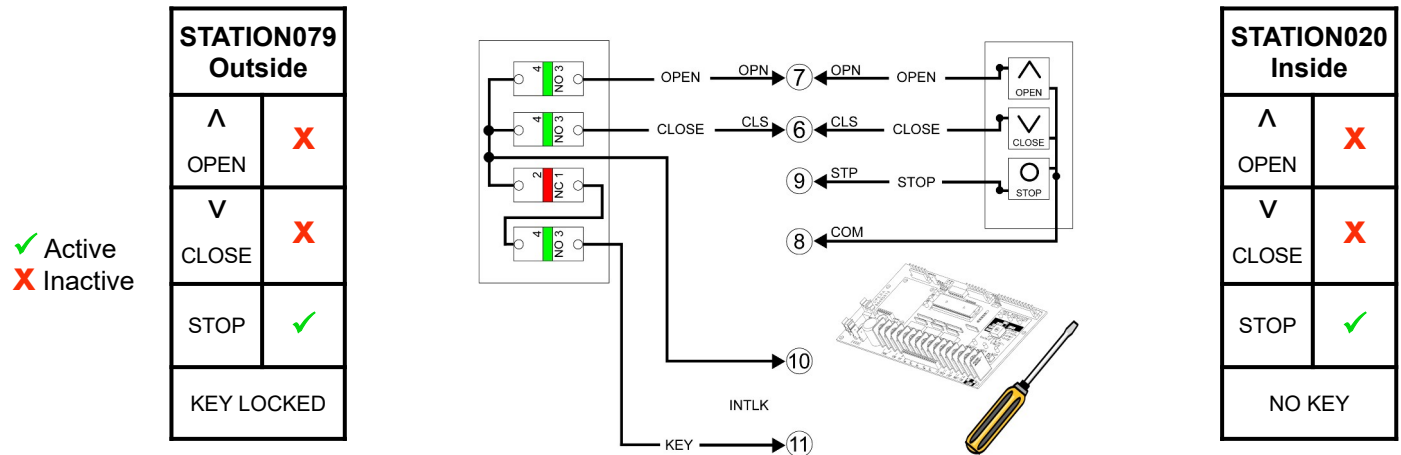

⚠ Note: Remove factory-installed jumper between Terminals T10 and T11.

Application 2: STATION079 and STATION020 (or another 3PBS station) → Key locks only STATION079.

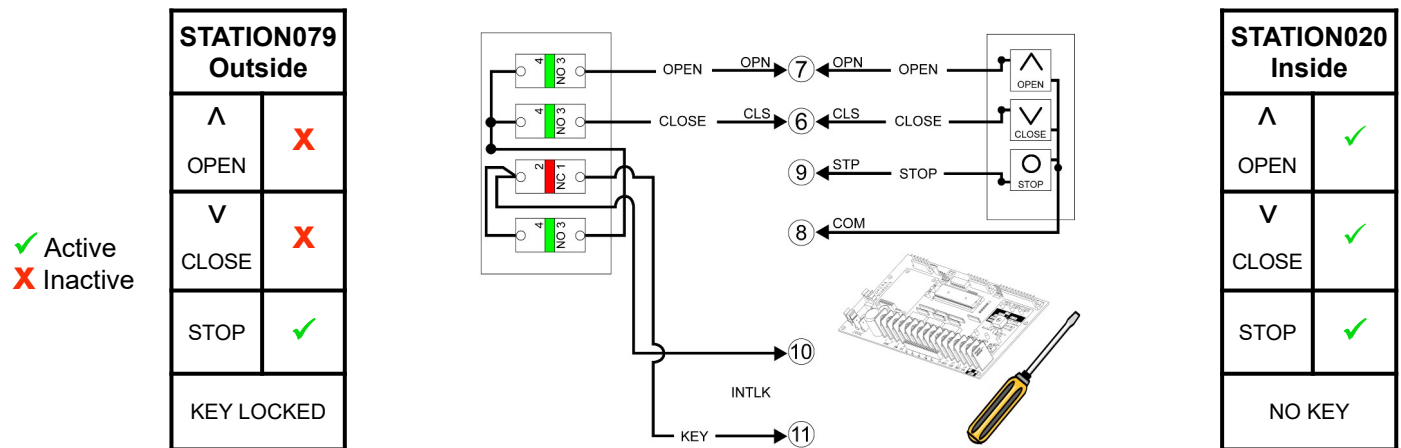

⚠ Note: Remove factory-installed jumper between Terminals T10 and T11.

For further information, please consult the operator's Installation & Instruction Manual or contact our Technical Support Department at **1-800-361-2260**.

2X FASTER*



RAPIDO™ TWICE AS FAST

OPEN AND CLOSE YOUR DOOR TWICE AS FAST WITH A RAPIDO™ OPERATOR FROM MANARAS-OPERA.

The RAPIDO™ features a door speed up to 2 times faster than standard models available to the commercial and industrial door market.

The RAPIDO™ increases the longevity of the complete door system, designed to speed-up industrial standard lift sectional doors while smoothly managing soft-starts and soft-stops.

CHOOSING THE RAPIDO™ IS SIMPLE WHEN TIME AND ENERGY SAVINGS IS A MUST.

On-board control and monitoring of external entrapment protection devices, provide speed managing features and enhanced performance and reliability.

*The RAPIDO™ operator is up to 2X the speed of a standard jackshaft operator.

CALL US FOR MORE INFORMATION: 1-800-361-2260

www.manaras.com